

KETTLER

ASSEMBLY AND OPERATING INSTRUCTIONS



max. 160 kg



~ 60 Min.



80 kg

L 183 | W 91 | H 174

FSKCT2004100.01.01

Art. No. K-CT2004-100

SKYLON 600

Content

1	GENERAL INFORMATION	8
1.1	Technical Data	8
1.2	Technical Drawings	9
1.3	Personal Safety	10
1.4	Electrical Safety	11
1.5	Set-Up Place	12
2	ASSEMBLY	13
2.1	General Instructions	13
2.2	Scope of Delivery	14
2.3	Assembly	16
3	OPERATING INSTRUCTIONS	26
3.1	Display Overview	26
3.2	Start Display	27
3.3	Home	28
3.3.1	Home Selection	28
3.3.2	Menu Navigation Overview	29
3.4	Settings	29
3.4.1	System Settings	29
3.4.2	Settings: WIFI and Updates	30
3.5	Training profiles	31
3.5.1	Training as a Guest	32
3.5.2	Training with a user profile	33
3.6	Training Programmes	35
3.6.1	Quick Start	36
3.6.2	Goal Programme	37
3.6.3	Workout	39
3.6.4	Watt Programme	41
3.6.5	Pulse Programme	42
3.6.6	Custom Programme	44
3.7	Training Display	46
3.8	Training Summary	48
3.9	Journal	49
3.9.1	Journal: Period	50
3.10	Mirror	52
3.11	USB-C Port	53
3.12	Watt Table	54

4	WORKOUT TIPS	55
4.1	General Instructions	55
4.1.1	Training clothes	55
4.1.2	Warming up and stretching	55
4.1.3	Medication	56
4.1.4	Used muscle groups	56
4.1.5	Exercise frequency	56
4.2	Workout journal	58
4.3	Wireless Connection and Fitness Apps	59
5	STORAGE AND TRANSPORT	60
5.1	General Instructions	60
5.2	Transportation Wheels	60
6	TROUBLESHOOTING, CARE AND MAINTENANCE	61
6.1	General Instructions	61
6.2	Faults and Fault Diagnosis	61
6.3	Error Codes and Troubleshooting	62
6.4	Maintenance and Inspection Calendar	63
7	DISPOSAL	63
8	RECOMMENDED ACCESSORIES	64
9	ORDERING SPARE PARTS	65
9.1	Serial Number and Model Name	65
9.2	Parts List	66
9.3	Exploded Drawing	73
10	WARRANTY	75
11	CONTACT	77

Dear customer,

Thank you for choosing a Kettler fitness device. Kettler Sport represents tradition, durability, and quality like no other home fitness brand. Classic home trainers such as the Golf have accompanied users for decades. At the same time, Kettler stands for innovation and continuously develops thoughtful solutions, particularly in usability and training comfort.

Kettler Sport provides everything you need for successful training at home: cardio and strength equipment, as well as a wide range of fitness accessories.

Further information can be found at www.fitshop.com/kettler.

Intended Use

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

Legal Notice

Fitshop GmbH
Europe's No. 1 for home fitness

International Headquarters
Flensburger Straße 55
24837 Schleswig
Germany

Management:
Christian Grau
Sebastian Campmann
Dr. Bernhard Schenkel
No. HRB 1000 SL
Local Court Flensburg
European VAT Number: DE813211547

Disclaimer

Since December 19, 2024, the trademark rights to © Kettler for fitness equipment in the EU, EFTA, and Turkey are held by Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

FITSHOP

Europe's No.1 for Home Fitness

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy.

Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.



CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!



WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!



DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!



NOTICE

This notice indicates further useful information.


Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

Weight and dimensions	
Item weight (gross, including packaging)	87.5 kg
Item weight (net, without packaging)	80.2 kg
Packaging dimensions of cartons (L x W x H)	125 cm x 47 cm x 78 cm
Set-up dimensions (L x W x H)	183 cm x 91 cm x 174 cm
Additional measurement data	
Step length	50.8 cm
Maximum load	
Maximum user weight	160 kg
Technical specifications	
Flyweight	10 kg
Resistance system	Induction braking system
Resistance levels	32
Power supply	Mains supply
Transmission ratio	1 : 10.1
Console data	
Display	Pulse
	Speed
	Distance
	Calories
	Time
	Watt
	RPM
Display size	10.1 Inches
Display type	Touch
Wattage specifications	
Min. and max. watts at 60 RPM	20 - 350 Watt
Programme overview	

Quick start	1
Target programmes	3
Heart rate controlled	4
Preset programmes	8
Target watt programmes	1
User programmes	4
Other data	
Menu language	English, German
Wireless connection	Yes
heart rate monitor	Hand pulse sensors, optional: chest strap
Use class	H

1.2 Technical Drawings

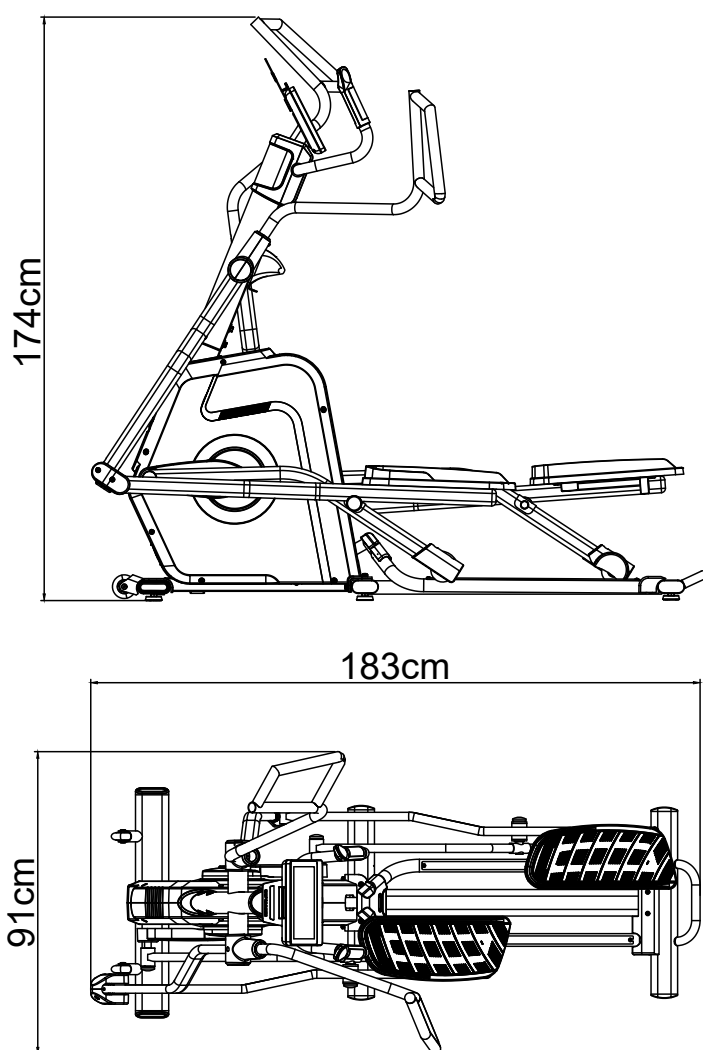

1.3 Personal Safety

DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + Remember that your device does not have a freewheel function. Therefore moving parts cannot be stopped immediately.
- + Note that the individual physical power required to perform an exercise may differ from the displayed mechanical power.
- + When ascending and descending, make sure that one of the treads is in the lowest position.
- + The equipment is strictly for use by one person at a time.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Do not insert any objects of any kind into the openings of the device.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.
- + The safety level of the appliance can only be maintained if it is regularly checked for damage and wear.

1.4 Electrical Safety

DANGER

- + In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

WARNING

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

ATTENTION

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the pre-installed apps. Do not install any additional apps.

NOTICE

- + The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.
- + Hereby, Fitshop GmbH declares that the radio equipment type Wireless Connection (2.402 – 2.480 GHz) complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following website: www.fitshop.com.

1.5 Set-Up Place

WARNING

- + Do not place the equipment in main corridors or escape routes.

CAUTION

- + Choose a location in which to place the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

2.1 General Instructions



DANGER

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.



WARNING

- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.



CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.



ATTENTION

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.



NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery


The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.


⚠ CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

📌 NOTICE

Required tools: screw driver, wrench

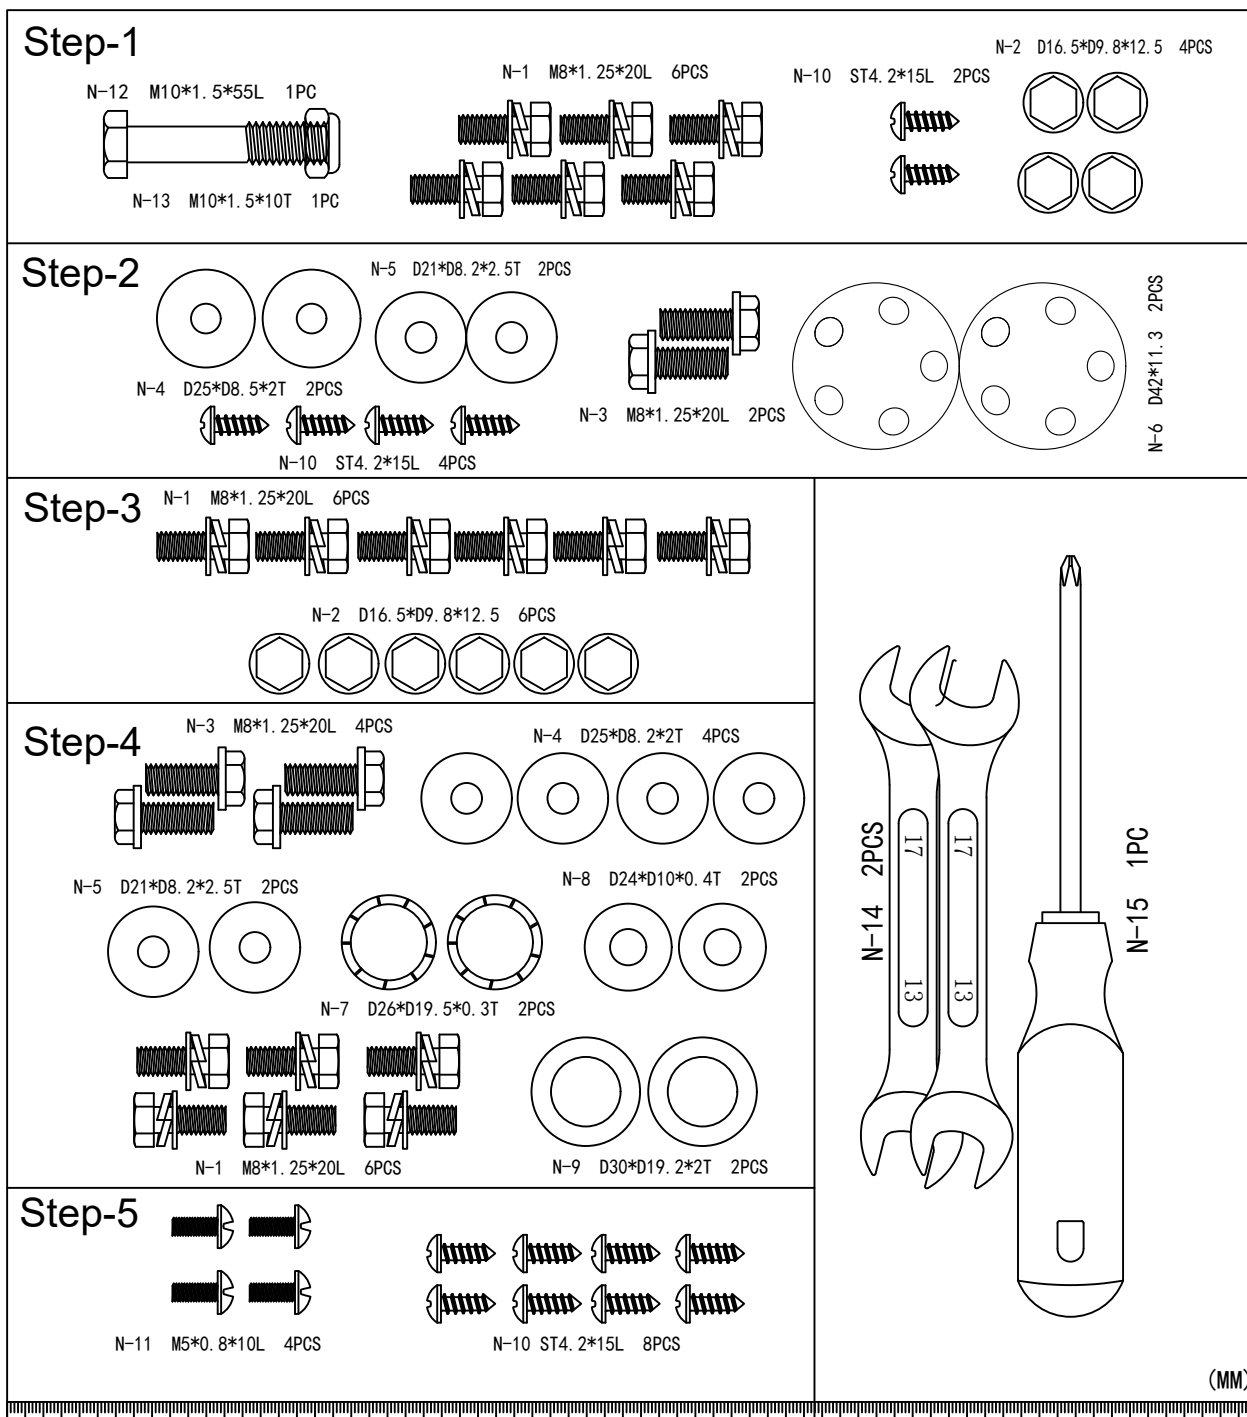

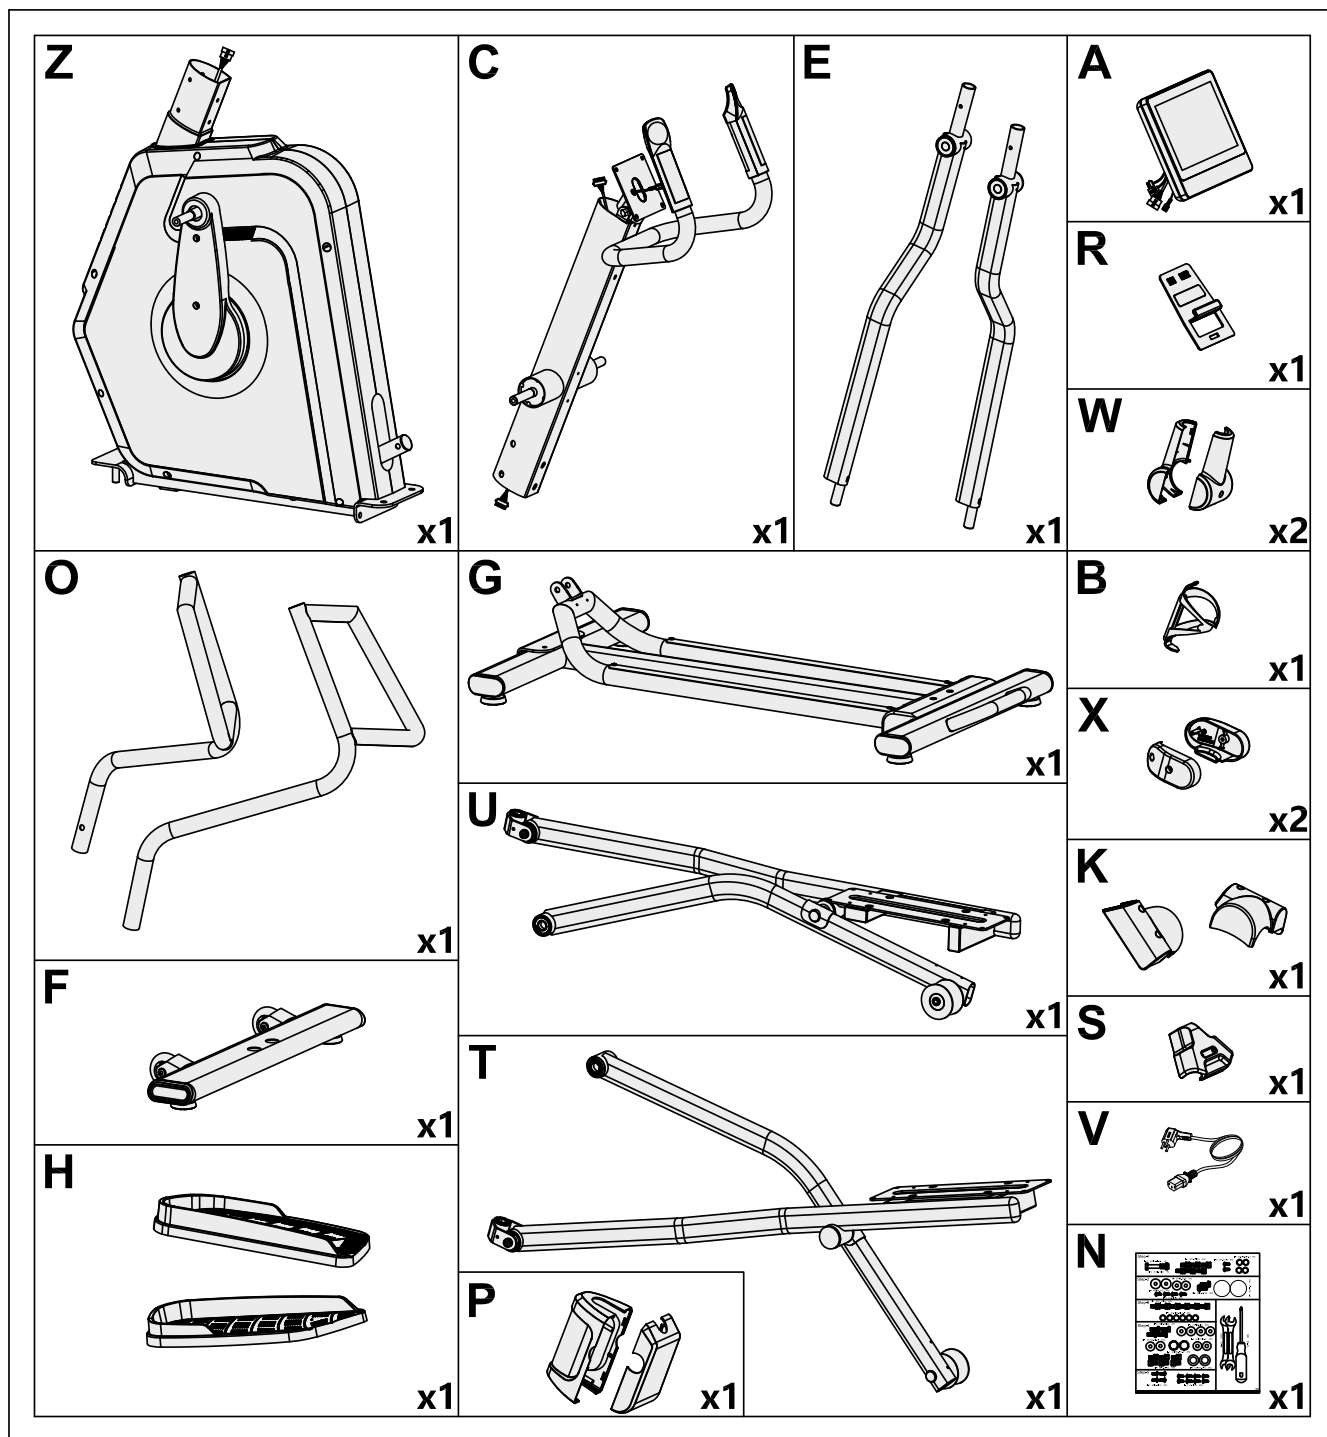

2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + Do not tighten the screws and bolts with excessive force as they could be damaged.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.
- + In the assembly steps, the main frame is shown as component "Z" for better clarity. However, in the exploded drawing and the parts list it is not listed as an individual part. This simplified representation is solely intended to make orientation during assembly easier.

Step 1: Assembly of the Stabilizers and Alignment of the feet

Required tools: screwdriver and both wrenches

1. 1-1: Fix the front stabilizer (F) to the main frame (Z) with two bolts (N-1).
2. 1-3 a: Cut the rope on the incline motor (D-7) and remove it.
3. 1-2: Fix the rear stabilizer (G) to the main frame (Z) with four bolts (N-1) and four screw covers (N-2).



CAUTION

 
Do not move the incline motor.

4. 1-3 b/c: Fix the rear stabilizer (G) to the incline motor (D-7) with one bolt (N-12) and one nut (N-13).
5. 1-3 d: Fix the slide beam cover (S) to the rear stabilizer (G) with two bolts (N-10).


NOTICE

If the floor is uneven, you can stabilize the equipment by turning the two setting screws under the main frame.

6. Lift the equipment on the desired side and rotate the setting screws under the main frame.
7. Rotate the screws clockwise in order to remove them and to raise the equipment.
8. Rotate them counterclockwise in order to lower the equipment.




(N-1)		M8*1.25*20L	X6
(N-2)		D16.5*9.8*12.5	X4
(N-12)		M10*1.5*55L	X1
(N-13)		M10*1.5*10T	X1
(N-10)		ST4.2*15L	X2

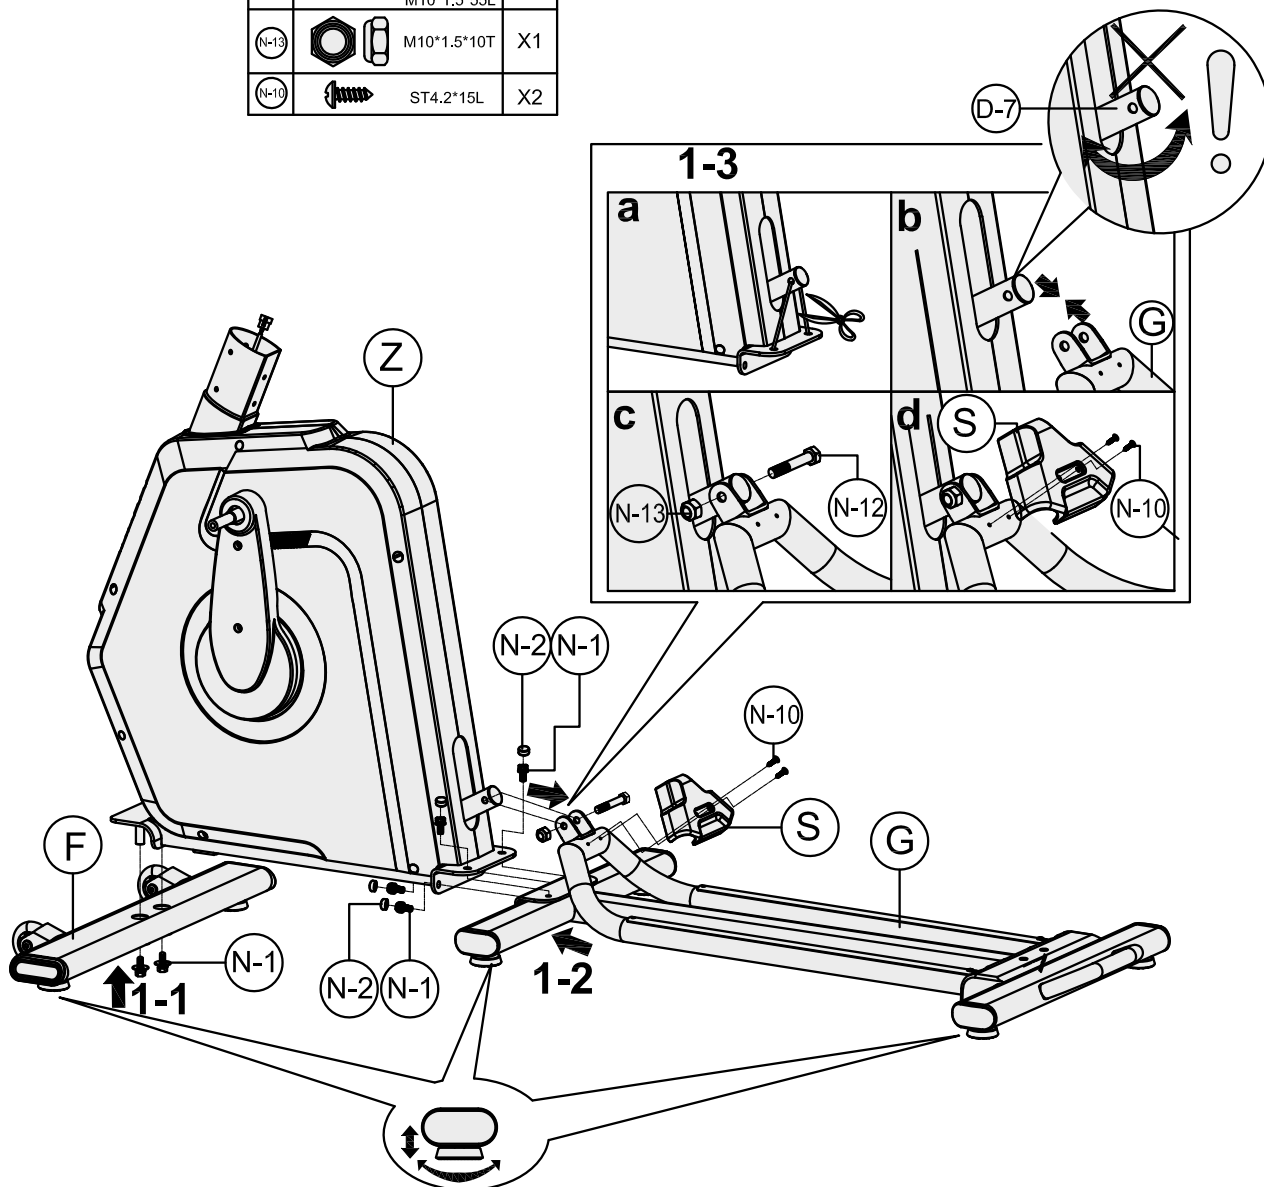


Step 2: Assembly of the Pedals

Required tools: screwdriver and one wrench

 1. 2-1: Fix the left pedal supporting tube (T) to the main frame (Z) with one axle cover (N-6), one bolt (N-3), one flat washer (N-4) and one buffer (N-5).
2. Fix the left pedal (H-1) to the left pedal supporting tube (T) with four bolts (H-3).
3. Fix the left moving wheel (K-1) to the left pedal supporting tube (T) with two bolts (N-10).
4. 2-2: Fix the right pedal supporting tube (U) to the main frame (Z) with one axle cover (N-6), one bolt (N-3), one flat washer (N-4) and one buffer (N-5).
5. Fix the right pedal (H-2) to the right pedal supporting tube (U) with four bolts (H-3).
6. Fix the right moving wheel (K-2) to the right pedal supporting tube (U) with two bolts (N-10).



(N-3)		M8*1.25*20L	X2
(N-4)		D25*D8.5*2T	X2
(N-5)		D21*D8.2*2.5T	X2
(N-6)		D42*11.3	X2
(N-10)		ST4.2*15L	X4
(H-3)		M6*1.0*10L	X8

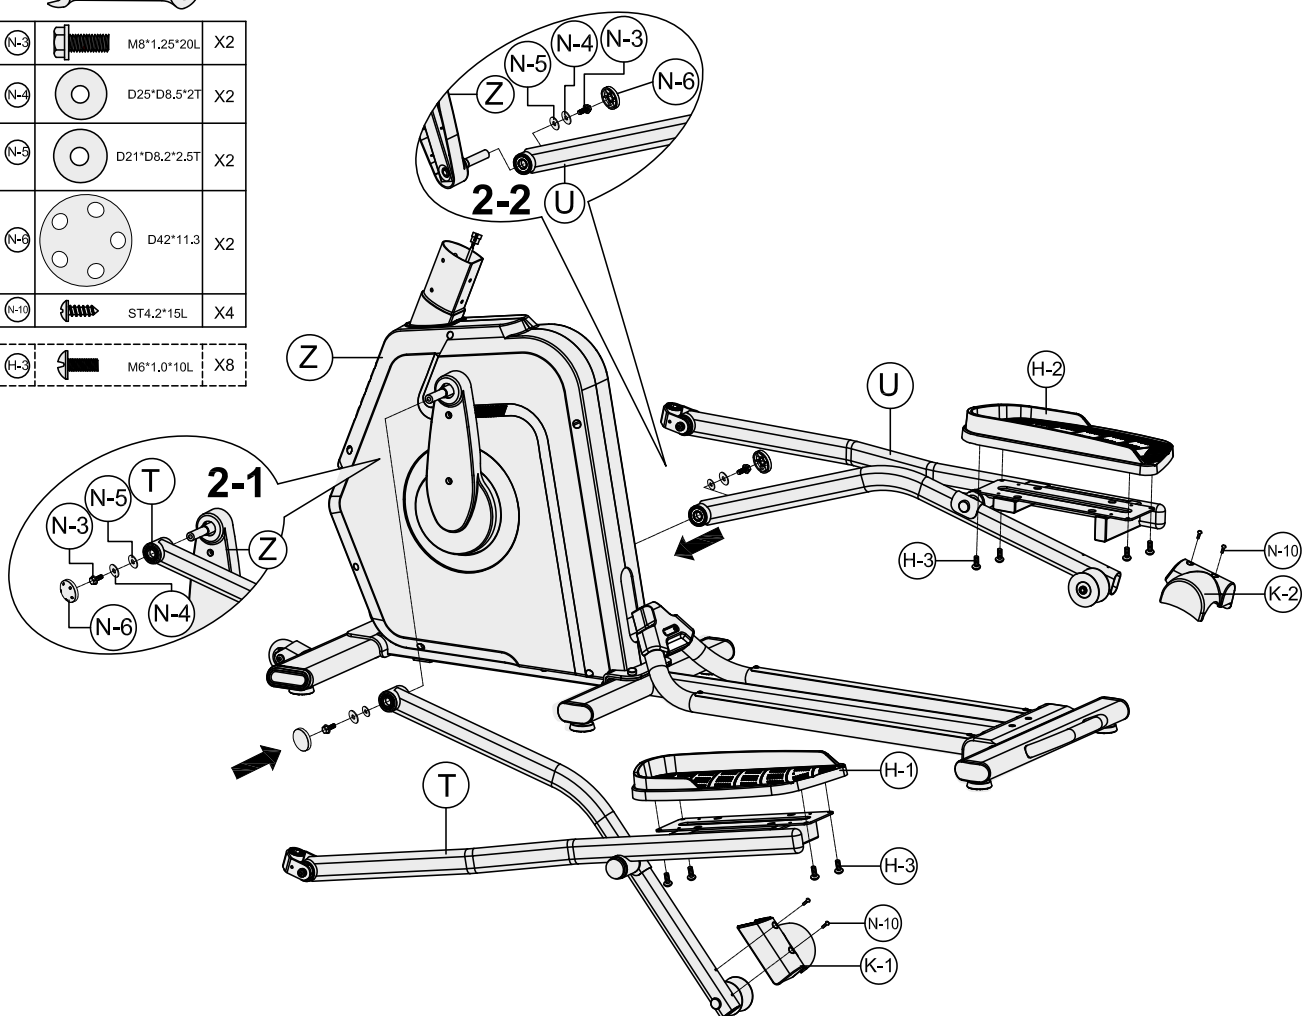


Step 3: Assembly of the Computer

Required tools: screwdriver and one wrench

CAUTION

- + Make sure the cable connectors are properly connected.
 - + Ensure that the cables are not pinched.
1. 3-1: Connect the cable of the main frame (D-3) to the cable of the handlebar post (C-6).
 2. 3-2: Fix the handlebar post (C) to the main frame (Z) with six bolts (N-1) and six bolt covers (N-2).
 3. 3-3: Slide the pad holder (R) into the back of the computer (A-1).
 4. 3-4: Connect the grounding wire with the cable of the handle bar post (C-18).
 5. 3-5: Pull the cable from the computer through the opening of the computer fixing plate (C-2).
 6. 3-6: Connect the computer cables to the handle bar post cables (C-6, C-12, C-13).
 7. 3-6: Fix the computer (A-1) to the handlebar post (C) with four bolts (A-2).

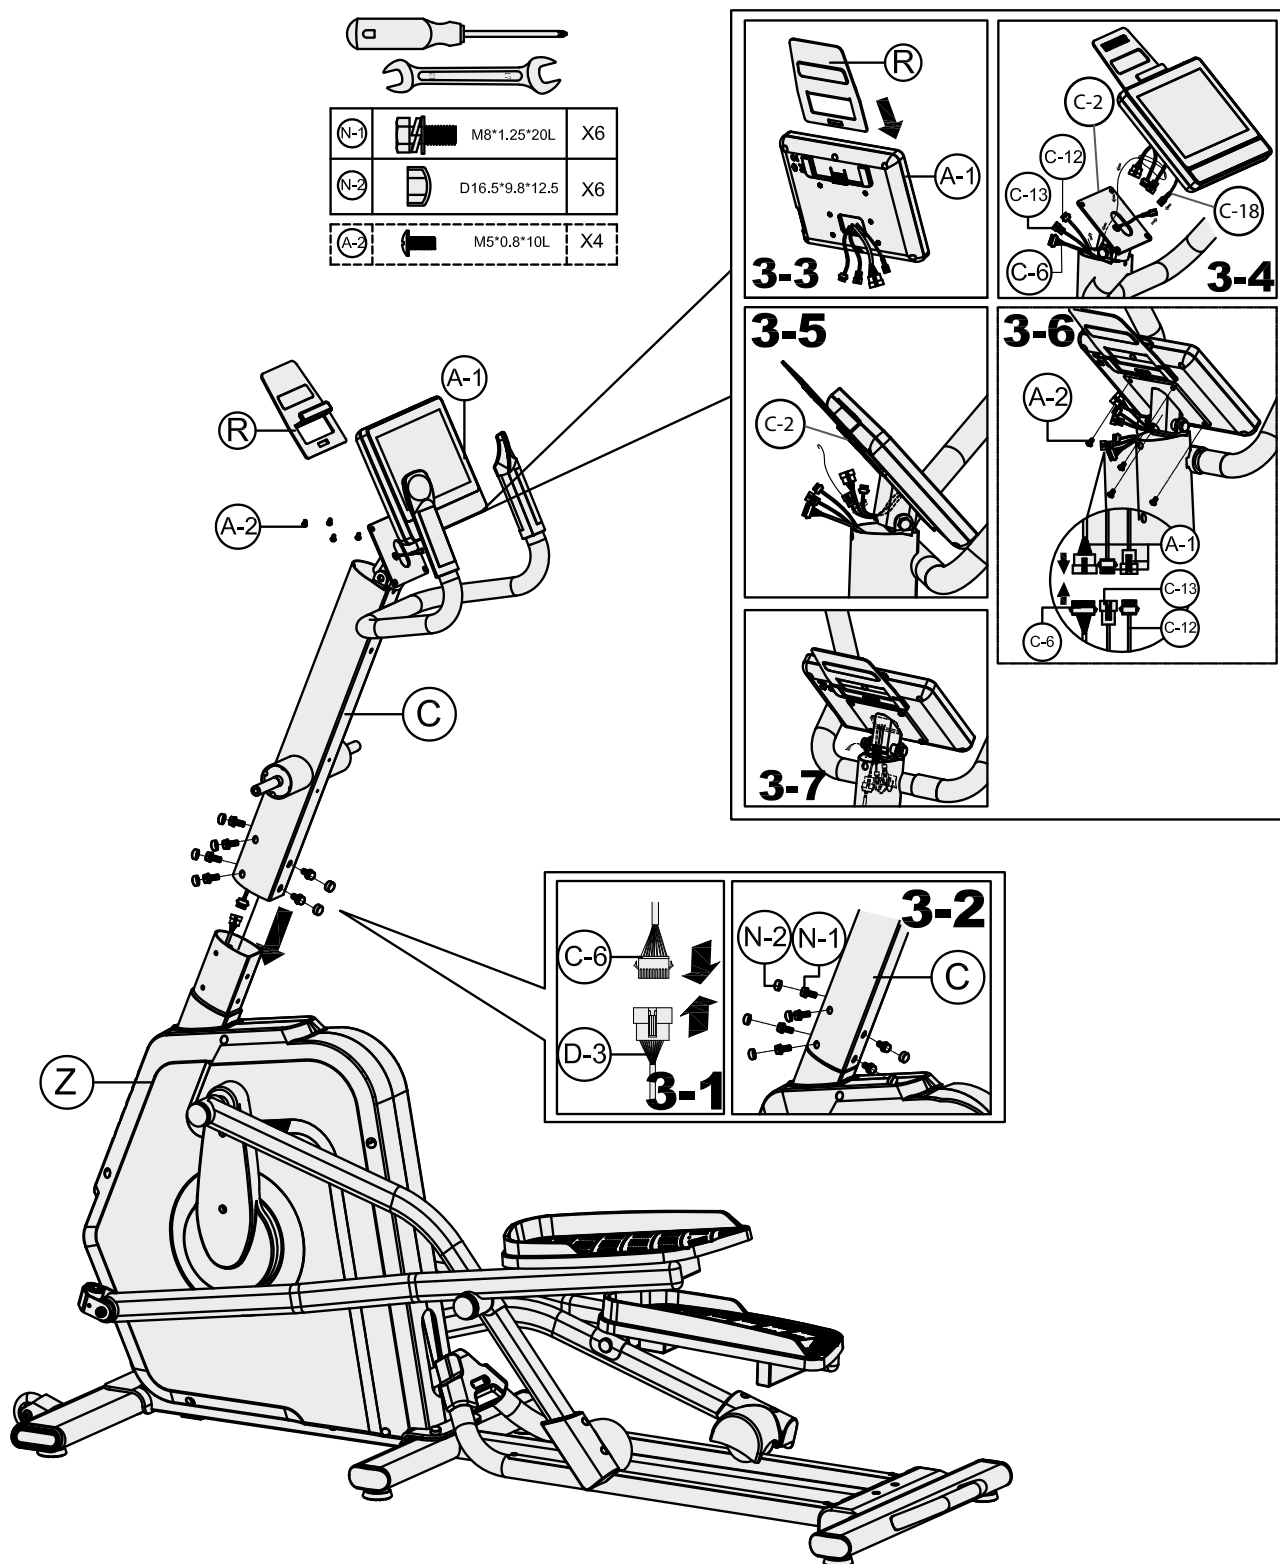


Step 4: Assembly of the Handlebars

Required tools: one wrench

1. 5-1: Fix the supporting tube for the left movable handlebar (E-1) to the handlebar post (C) with one bolt (N-14), one flat washer (N-4) and one buffer (N-5).
2. 5-2: Fix the supporting tube for the right movable handlebar (E-2) to the handlebar post (C) with one bolt (N-14), one flat washer (N-4) and one buffer (N-5).
3. 5-3: Fix the supporting tube for the left movable handlebar (E-1) to the left pedal supporting tube (T) with one bolt (N-14), one flat washer (N-4), one plastic washer (N-8), one waved washer (N-7) and one flat washer (N-9).
4. 5-4: Fix the supporting tube for the right movable handlebar (E-2) to the right pedal supporting tube (U) with one bolt (N-14), one flat washer (N-4), one plastic washer (N-8), one waved washer (N-7) and one flat washer (N-9).
5. Fix the left handlebar (O-1) to the supporting tube for the left movable handlebar (E-1) with three bolts (N-1).
6. Fix the right handlebar (O-2) to the supporting tube for the right movable handlebar (E-2) with three bolts (N-1).



N-14		M8*1,25*20L	X4
N-4		D25*D8,5*2T	X4
N-5		D21*D8,2*2,5T	X2
N-3		D24*D10*0,4T	X2
N-7		D26*D19,5*0,3T	X2
N-9		D30*D19,2*2T	X2
N-1		M8*1,25*20L	X6

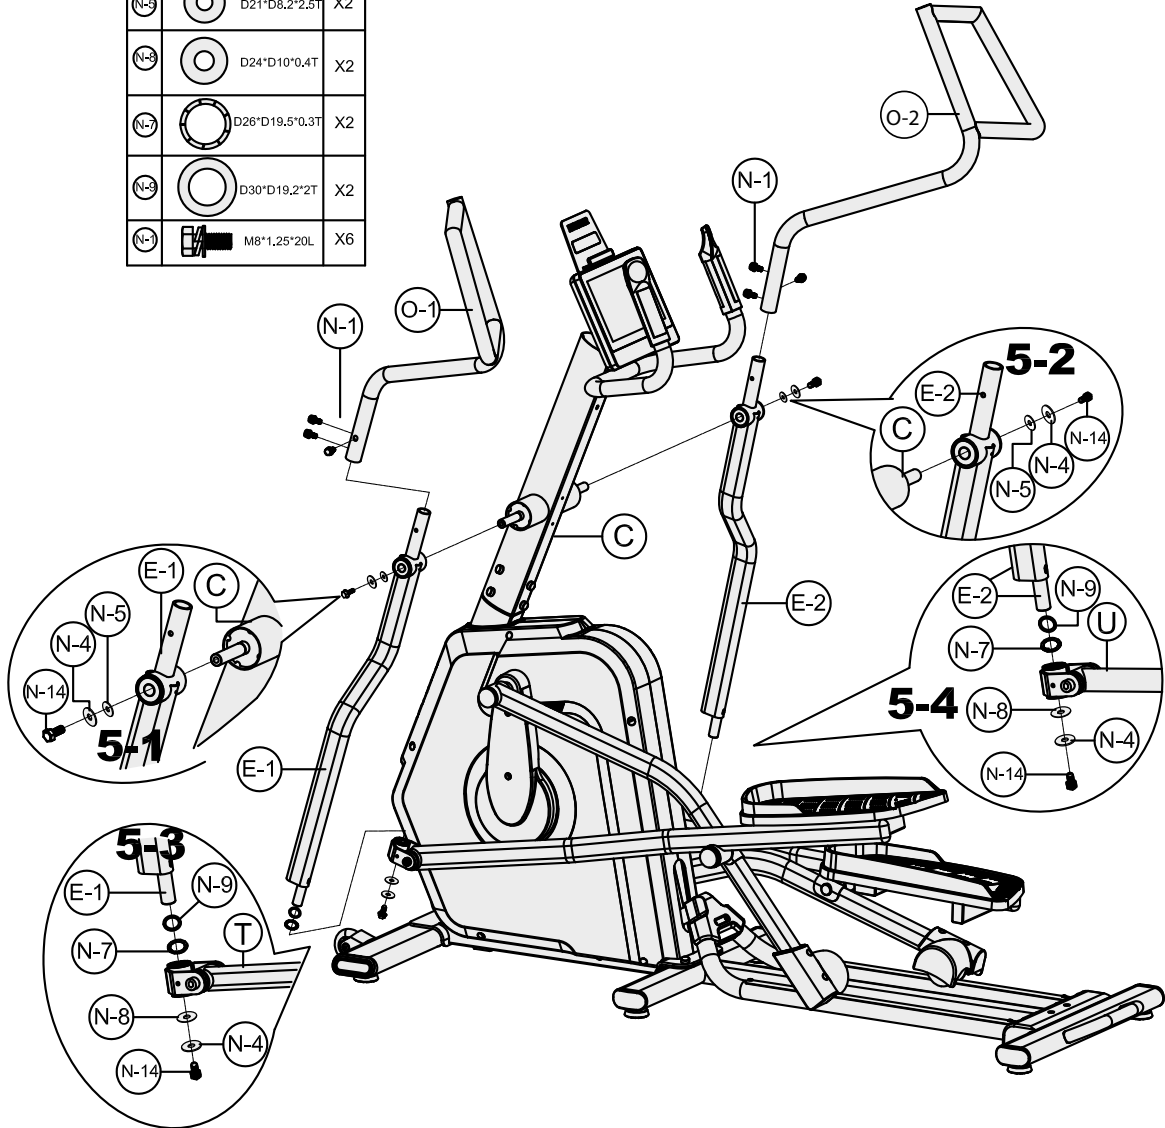

Step 5: Assembly of the Covers

Required tools: screwdriver

1. Fix the front and rear computer bracket (P-1, P-2) to the handlebar post (C) with two screws (N-10).
2. Fix one front and rear handlebar cover (W-1, W-2) to the supporting tube for the left movable handlebar (E-1) with two screws (N-10).
3. Fix one front and rear handlebar cover (W-1, W-2) to the supporting tube for the right movable handlebar (E-2) with two screws (N-10).
4. Fix one left and right cover for pedal tube (X-1, X-2) to the left pedal supporting tube (T) with two bolts (N-11) and one screw (N-10).
5. Fix one left and right cover for pedal tube (X-1, X-2) to the right pedal supporting tube (U) with two bolts (N-11) and one screw (N-10).
6. Fix the bottle holder (B) to the handlebar post (C) with two screws (C-17).

Step 6: Connecting the equipment to the mains supply

► ATTENTION

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.

Plug the power plug (V) into a wall outlet that complies with the instructions in the chapter on electrical safety.


Correctly Getting On and Off

1. To get on, grip the handles with both hands and first step onto the left pedal with your left foot or onto the right pedal with your right foot and then place your foot onto the other pedal.
2. To get off, grip the handles with both hands and place one foot next to the equipment and then the other foot.



N-10		ST4.2*15L	X8
N-11		M5*0.8*10L	X4

C-17		M5*0.8*15L	x2
------	--	------------	----

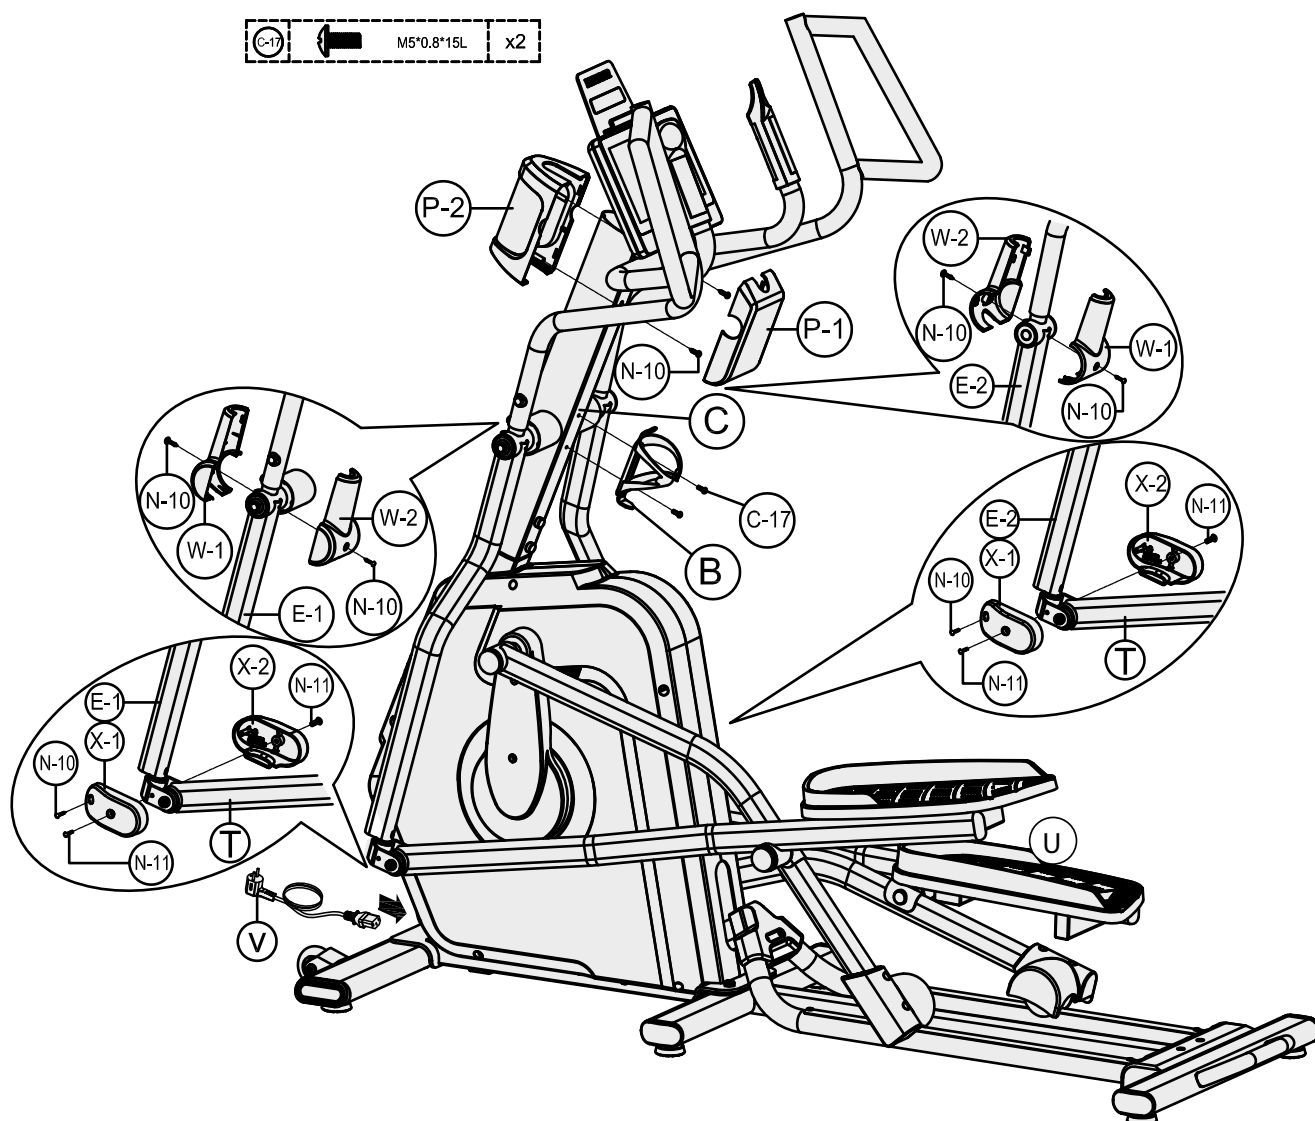

① NOTICE

- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- + Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.

3.1 Display Overview




The following chapters provide a detailed overview of all console functions.

3.2 Start Display

The home screen is displayed after switching on the console. A guest profile and saved user profiles are available for selection.

The following chapters and subchapters provide a detailed description of the console functions.

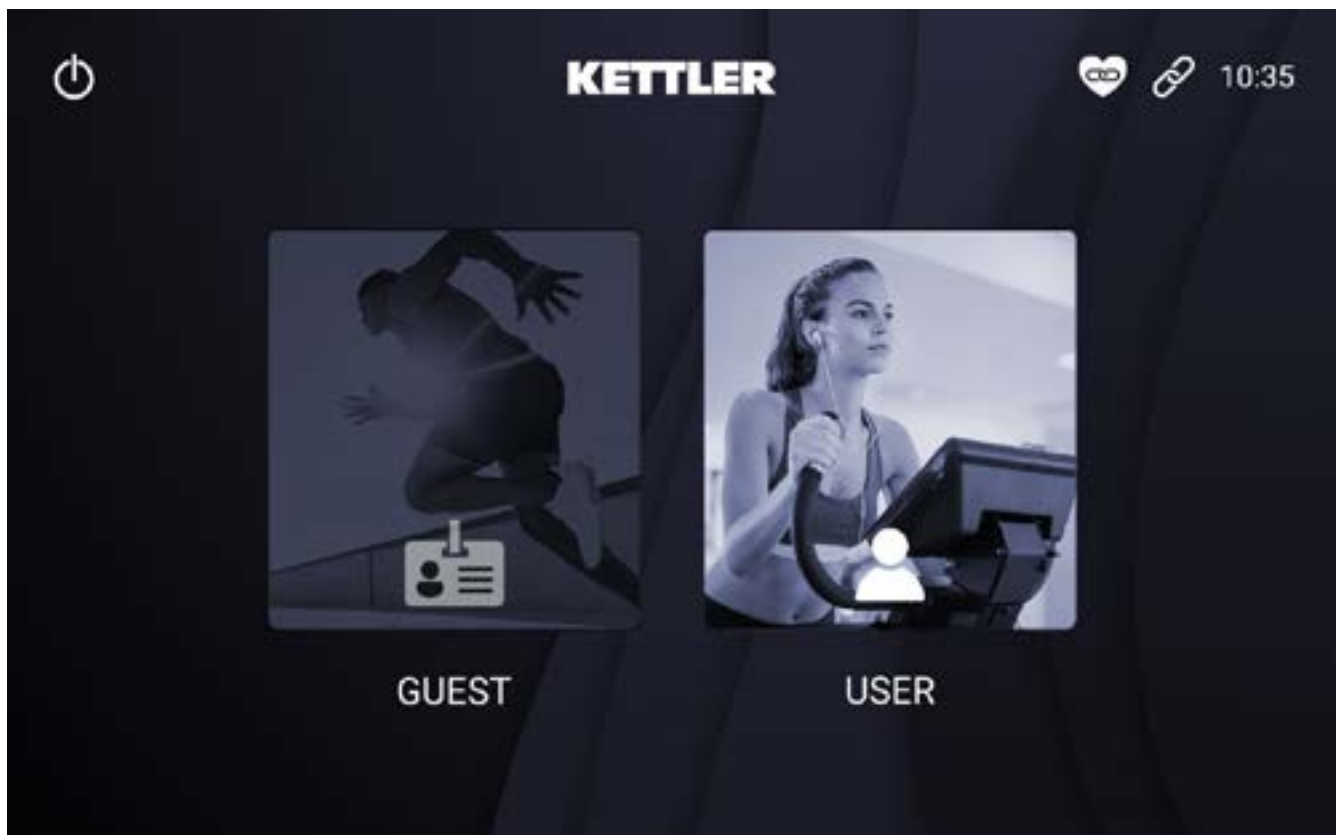


NOTICE

To start a workout, log in with a guest profile or a saved user profile. Refer to the chapter **Training profiles**.

3.3 Home

The home area provides an overview of the console functions.

Prerequisite: Log in with a guest profile or a user profile to access the home area. Refer to the chapter [Training profiles](#).

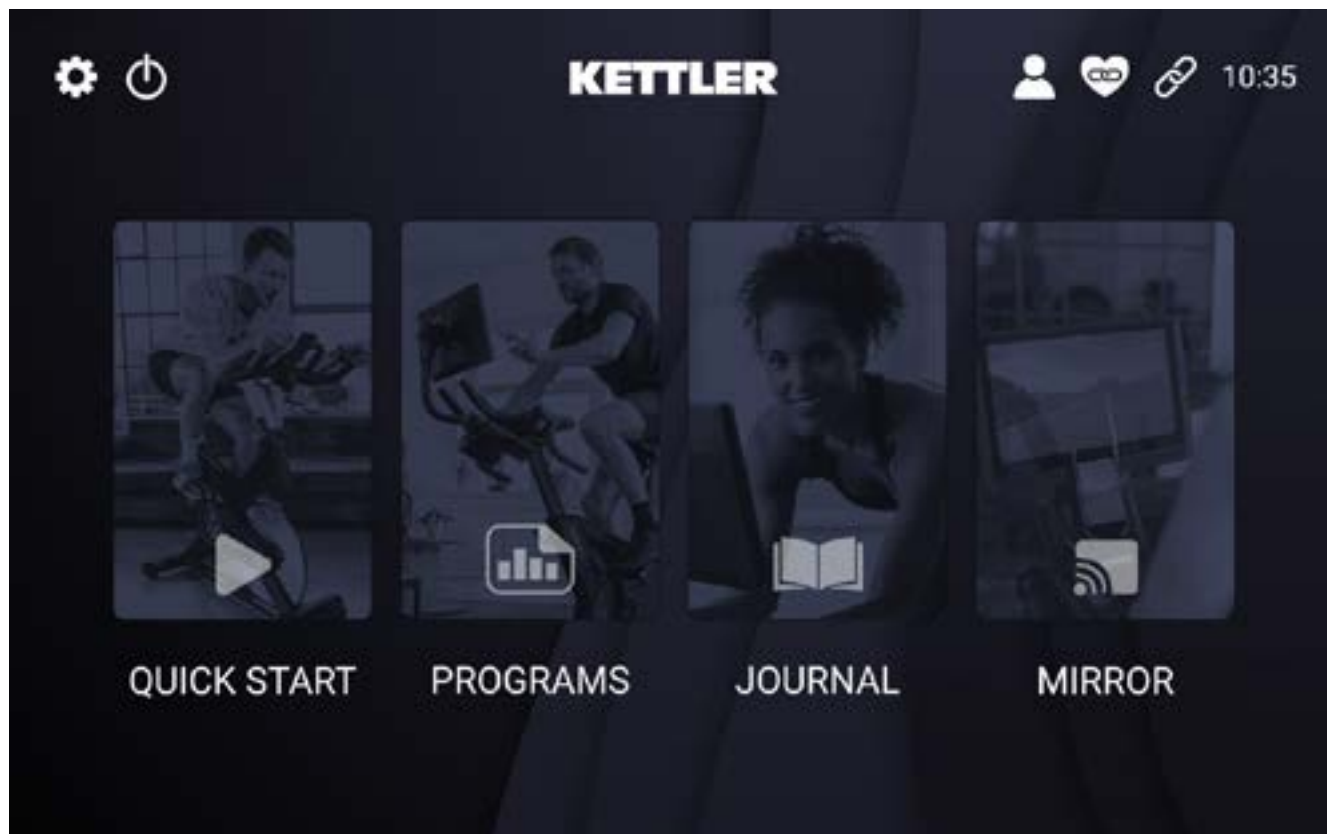

3.3.1 Home Selection

The following table provides an overview of the options available in the Home area.

SELECTION	DESCRIPTION
QUICKSTART	Start a workout without preset settings
PROGRAMMES	You open the programme selection
JOURNAL	You open your training log
MIRROR	Mirror your device's screen to the console

3.3.2 Menu Navigation Overview

The following table shows the top menu items.

DISPLAY	SELECTION	DESCRIPTION
	SETTINGS	Open the system and network settings
	OFF	Put the console into standby mode
	USER PROFILE / GUEST PROFILE	Open the currently logged-in guest or user profile
	CHEST STRAP CONNECTION	Indicates whether a chest strap is connected
	FTMS	Indicates whether an FTMS or wireless connection is active.


3.4 Settings

In the settings, you can adjust system settings, connect your device to Wi-Fi, and check for updates.

NOTICE

To access the settings, tap  in the Home area.

3.4.1 System Settings

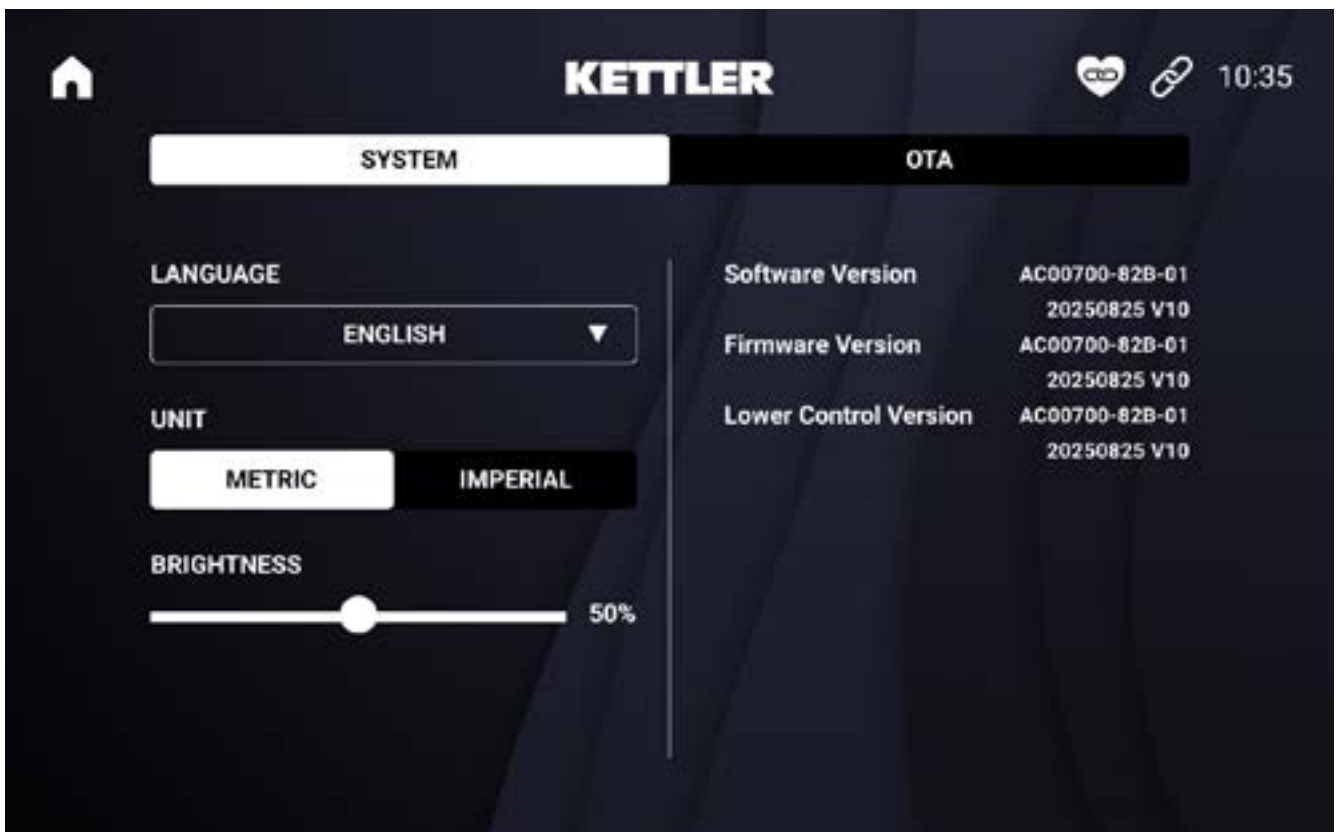

NOTICE

In the system settings, you can view the software, firmware, and lower control versions.

In the system settings, you can make general adjustments:

Change language:

1. Tap the box with the currently selected language.

A selection list opens.

2. Select the desired language.

Change unit of measurement:


1. Choose between Metric (kilometers) and Imperial (miles).

Change brightness:

1. Adjust the slider.
2. To exit the settings and return to the Home area, tap .

→ *You are in the Home area.*

3.4.2 Settings: WIFI and Updates

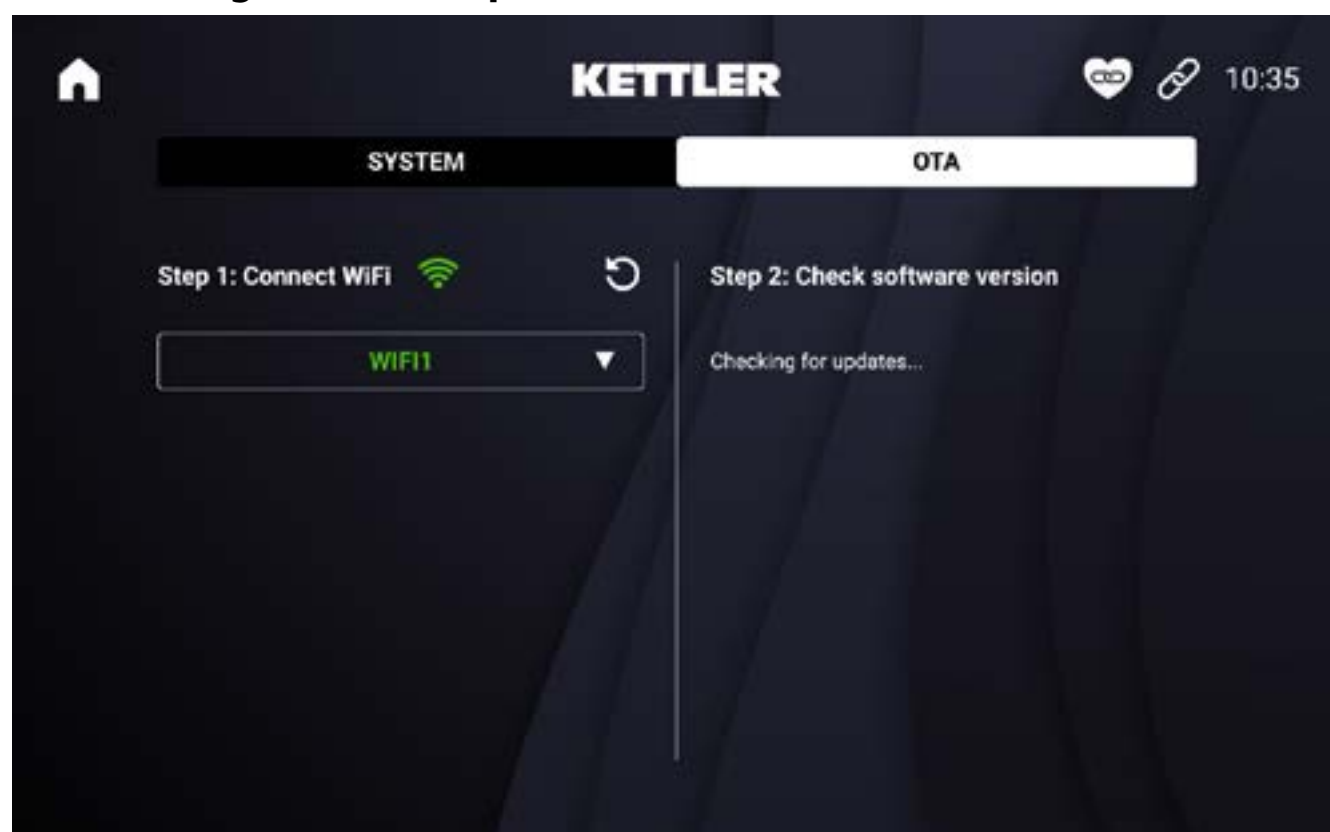

Connect to Wi-Fi:

1. Tap the “Wi-Fi” field.
2. Tap to refresh the list.
3. Select your network.

4. Enter your Wi-Fi password.
5. Confirm the entry.

You are connected to Wi-Fi.

Update software version:

① NOTICE

Please note that a Wi-Fi connection is required for the update.

1. Tap **CHECK**.

If an update is available, UPDATE is displayed. If no update is available, your console is up to date.

2. Tap UPDATE.


The console downloads the update.

3. To exit the settings and return to the Home area, tap .

→ *You are in the Home area.*

3.5 Training profiles

You can train as a guest or as a saved user. An explanation of the training profiles can be found in the following subsections.

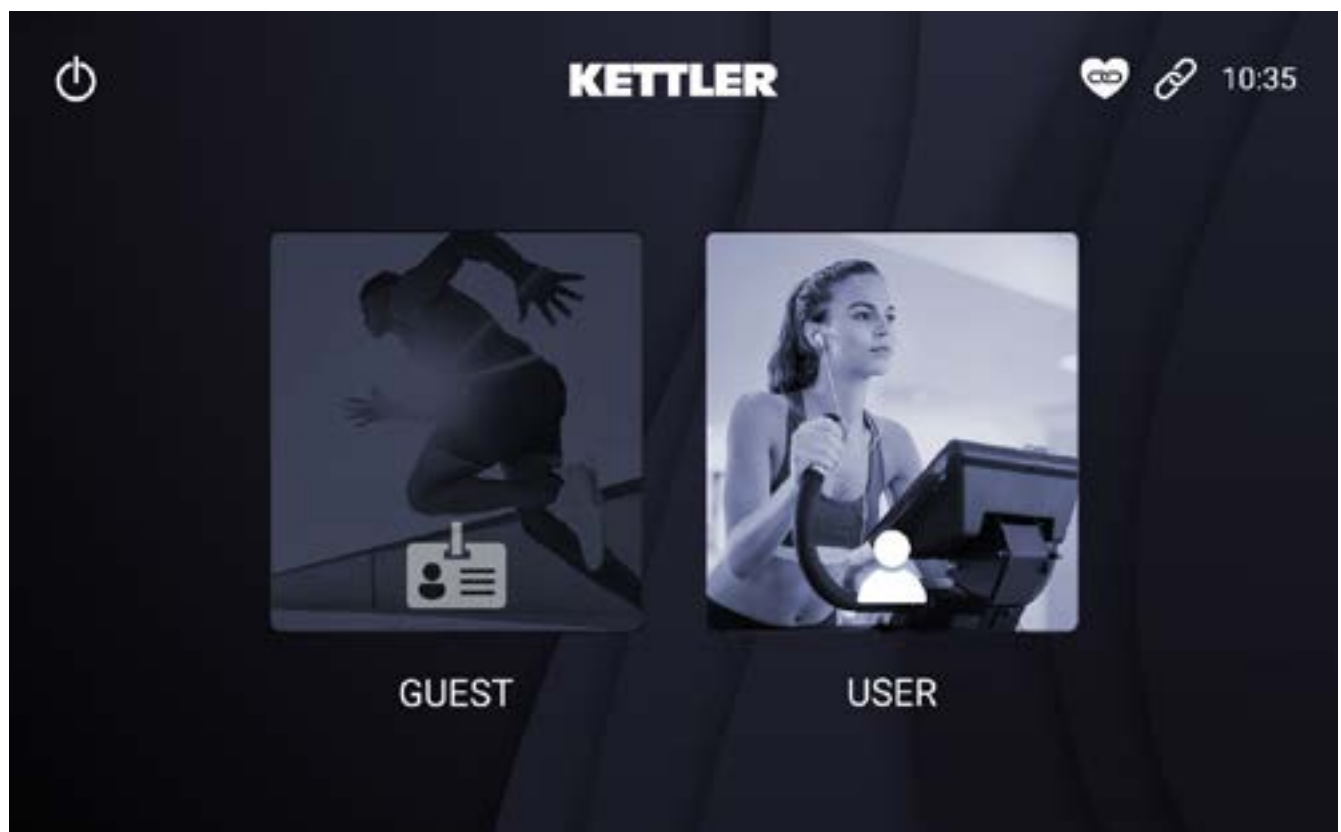

① NOTICE

When you turn on the console, you are taken to the overview of guest and user profiles.

1. Tap  in the Home area to open the guest profile settings. Tap  in the Home area to open the user profile selection.

Refer to the following subsections.

3.5.1 Training as a Guest

You can train using a guest profile. In the guest profile, you can enter your training data – this data is saved until the console is restarted or turned off.

NOTICE


- + Your configured user programmes and training log entries remain saved.
- + To return to the start screen without saving your data, tap .

Set up guest profile:

Prerequisite: You are in the guest profile settings.

2. Enter your data.
3. Confirm with .

→ *Your data is saved until the next restart.*

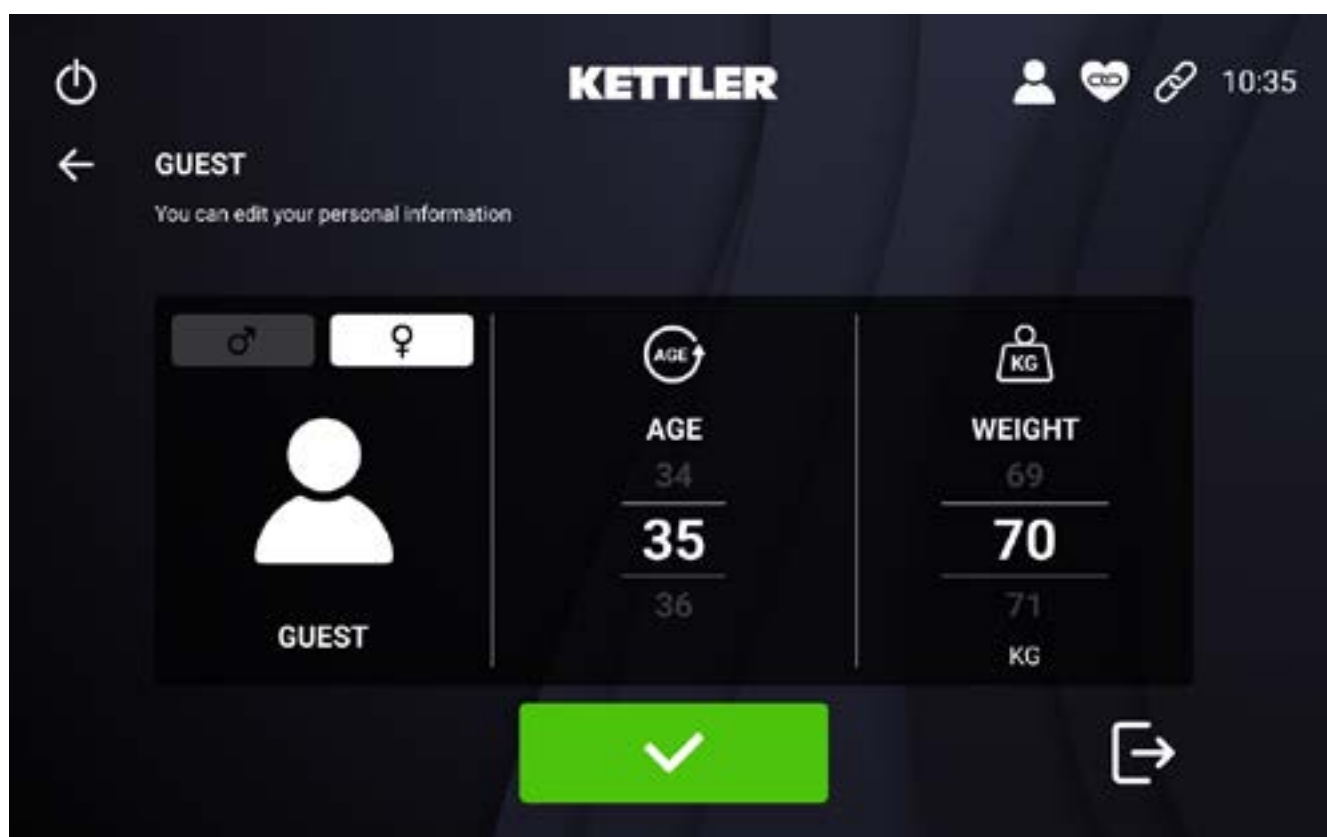

The following table shows the settings available for the guest profile:

SELECTION	DESCRIPTION
GENDER	Selection: + Male ♂ + Female ♀
AGE	Selection: 10–99
WEIGHT	Selection: + 20–200 kg + 44–440 lb

Log out of the guest profile:

1. Open the guest profile via .
2. Tap .

→ Your guest profile is logged out, and you can switch to a user profile.

3.5.2 Training with a user profile

You can create up to four profiles that you can access at any time. Each profile can save up to four custom programmes.



Create a profile:


Prerequisite: You are on the start screen.

1. Tap User on the start screen.
2. Tap an unassigned user .

The profile settings open.

3. Enter your data.
4. Confirm with .

→ *Your data is saved.*

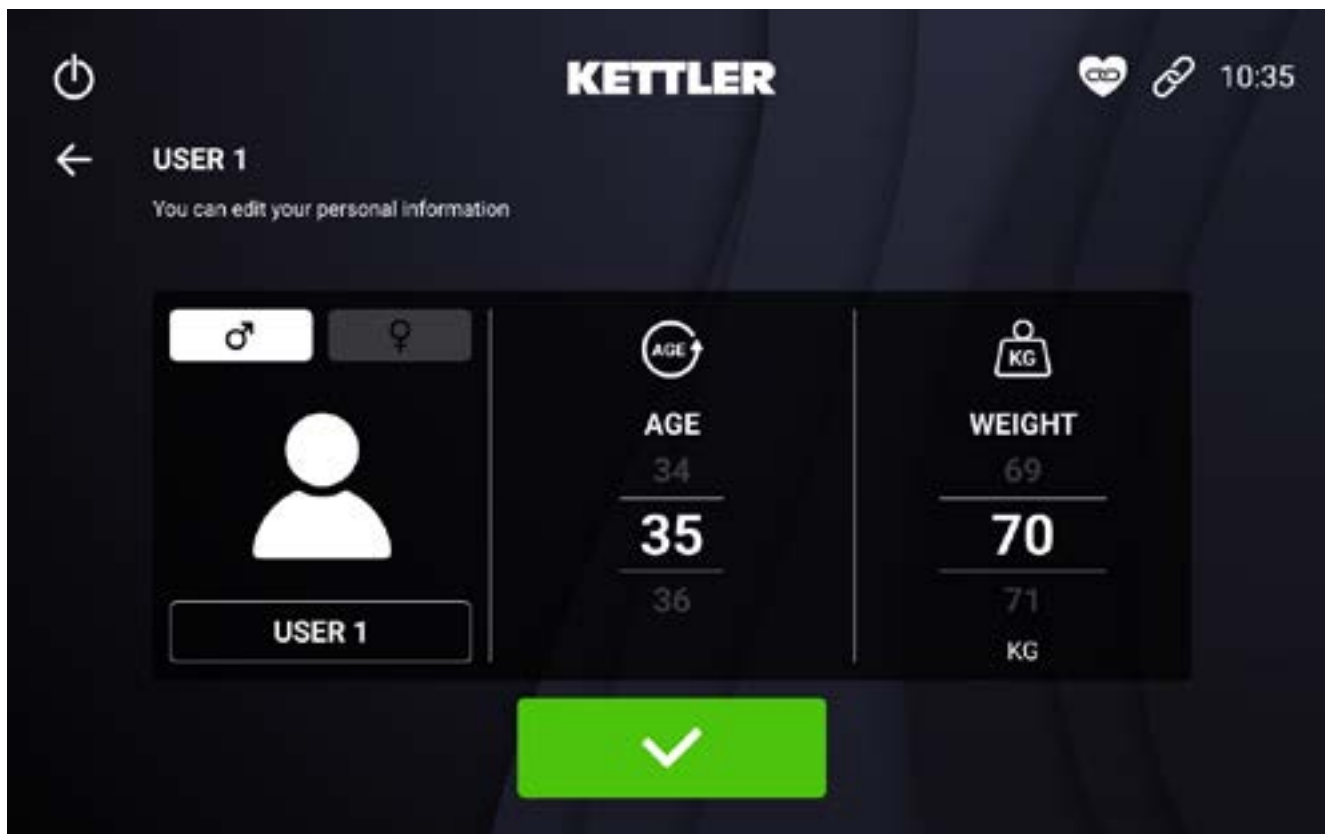

The following table shows the settings available for your user profile:

SELECTION	DESCRIPTION
GENDER	Selection: + Male  + Female 
AGE	Selection: 10–99
WEIGHT	Selection: + 20–200 kg + 44–440 lb

Log out of the user profile:

1. Open your profile in the Home area via (KA).
2. Tap .

→ Your profile is logged out, and you can switch to a guest or another user profile.

Delete a profile:

1. Open your profile via (KA).
2. Tap .
3. Confirm the entry.

→ The profile is deleted – you can create a new one.

3.6 Training Programmes

Your device offers a wide range of training programmes to support you in achieving your training goals. The following is an overview of the available training programmes.

Prerequisite: Log in with a guest or user profile to access the Home area.




PROGRAMME	DESCRIPTION	QTY
QUICK START	Manual training without preset settings	1
GOAL	Enter a target value for your workout, which will count down	3
H.R.C	The resistance is adjusted so that you reach your target heart rate	4

WORKOUT	Training with a preset profile. Adjust the training data in advance if needed	8
WATT	The resistance is automatically adjusted to your pedaling speed to reach a specific watt value	1
CUSTOM	Create your own training programme	4

The following subsections provide a detailed description of the training programmes.

3.6.1 Quick Start

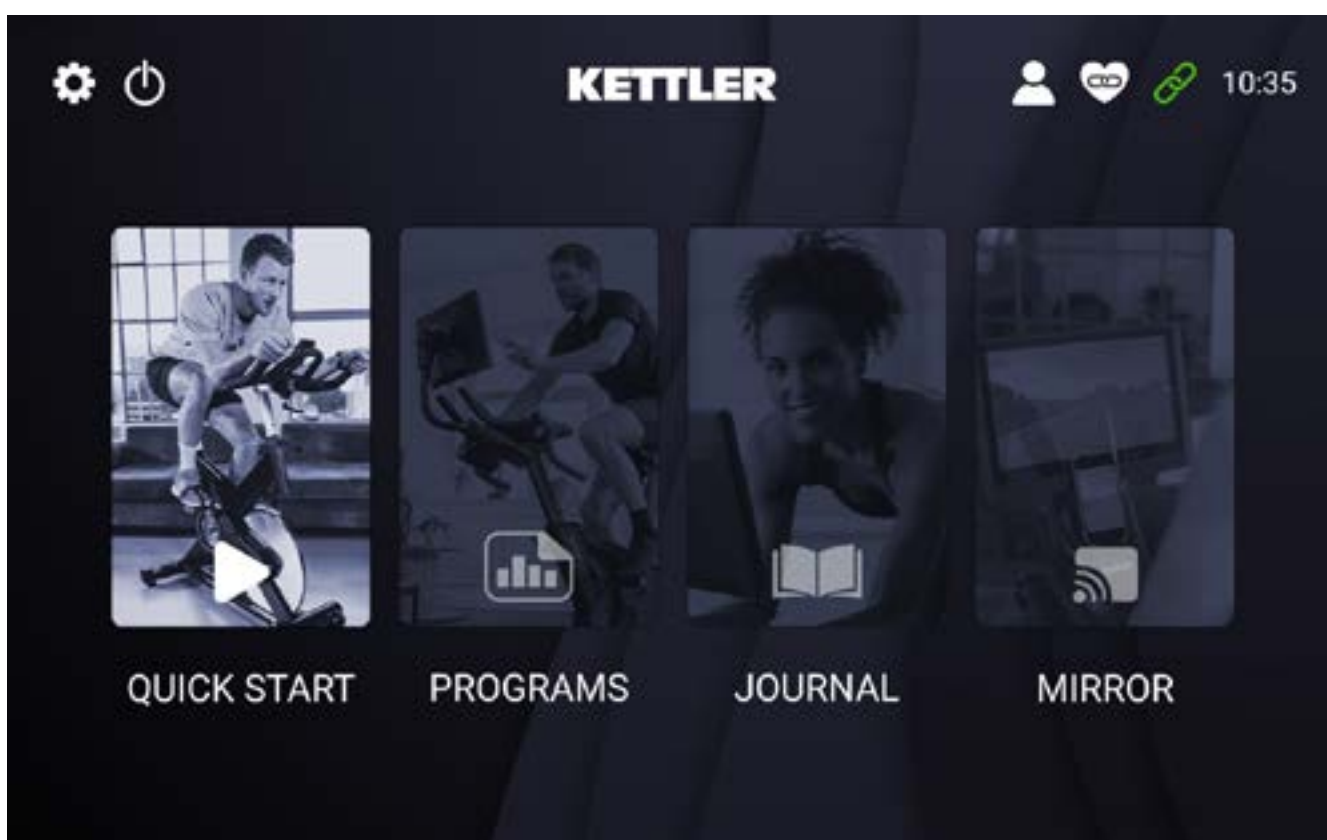

To start a workout without preset settings, select the Quick Start programme.

① NOTICE

Refer to the chapter **Training Display** for an explanation of the displayed data.

To start the Quick Start programme:

1. Tap Quick Start.
- 1.1. Or: select Quick Start in the training programmes.

The programme starts.


2. Set the desired resistance and incline.
3. Tap  to pause the programme.
4. Tap  to resume the training.
- 4.1. Tap  in pause mode to end the programme.

After the workout is completed, a summary of your training data is displayed. Refer to the chapter *Training Summary*.

5. Return to the Home area with .

→ You are in the Home area.

3.6.2 Goal Programme

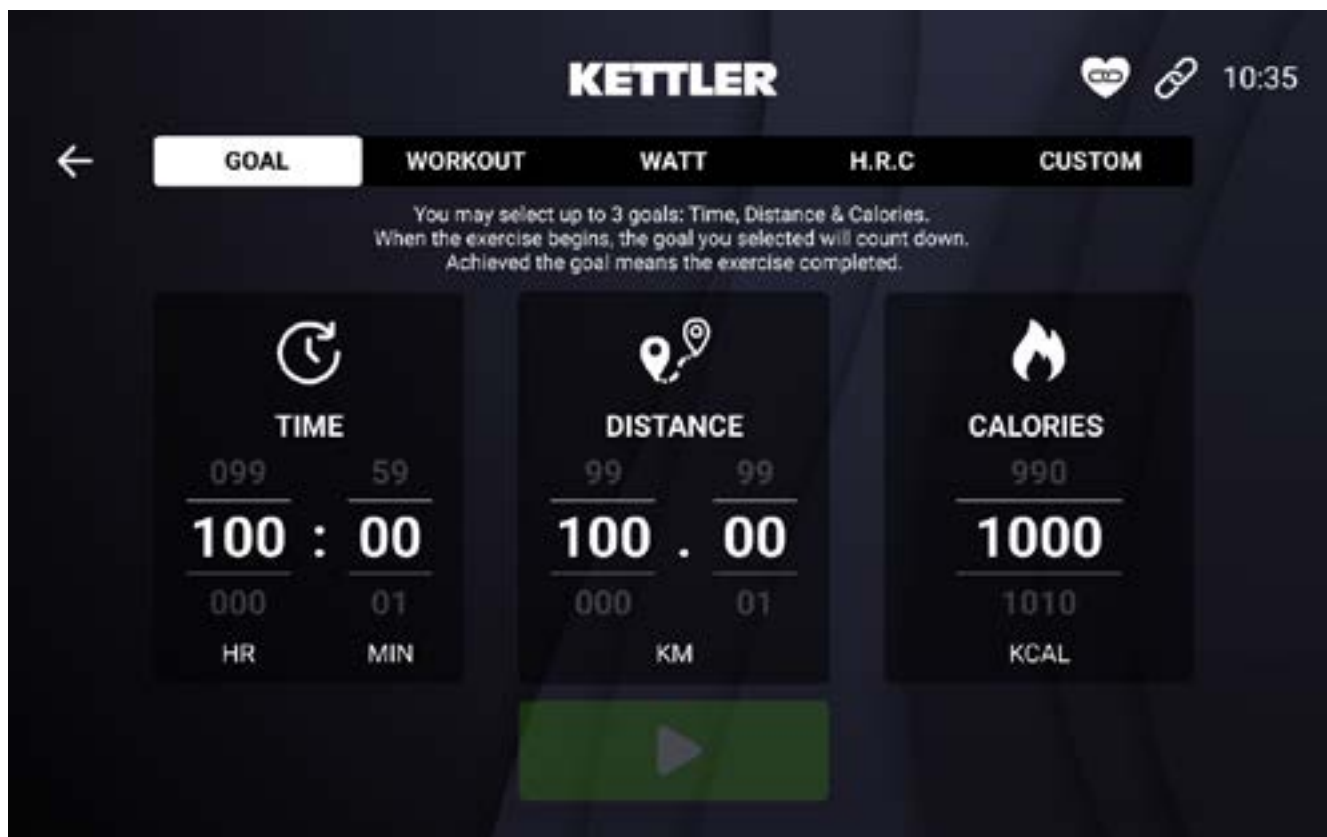

To start a workout with goals, select one of the three available goal programmes. Refer to the following overview of the goal values:

SELECTION	DESCRIPTION
TIME	<ul style="list-style-type: none"> + Set a time goal value. + Adjustment range: 000:00–100:59
DISTANCE	<ul style="list-style-type: none"> + Set a distance goal value. + Adjustment range: 000.00–100.99 km
CALORIES	<ul style="list-style-type: none"> + Set a calorie goal value. + Adjustment range: 10–9999 kcal

① NOTICE

- + Refer to the chapter Training Display for an explanation of the displayed data.
- + Please note that only the goal value you set last will be applied.

To start a goal programme:

1. Tap Goal in the programme selection.
2. Set your desired goal value.
3. Tap .

The programme starts.


4. Set the desired resistance and incline.
5. Tap  to pause the programme.
6. Tap  to resume the training.
- 6.1. Tap  in pause mode to end the programme.
7. The programme ends automatically when your goal value is reached.

After the workout is completed, a summary of your training data is displayed. Refer to the chapter Training Summary.

8. Return to the Home area with .

→ *You are in the Home area.*

3.6.3 Workout

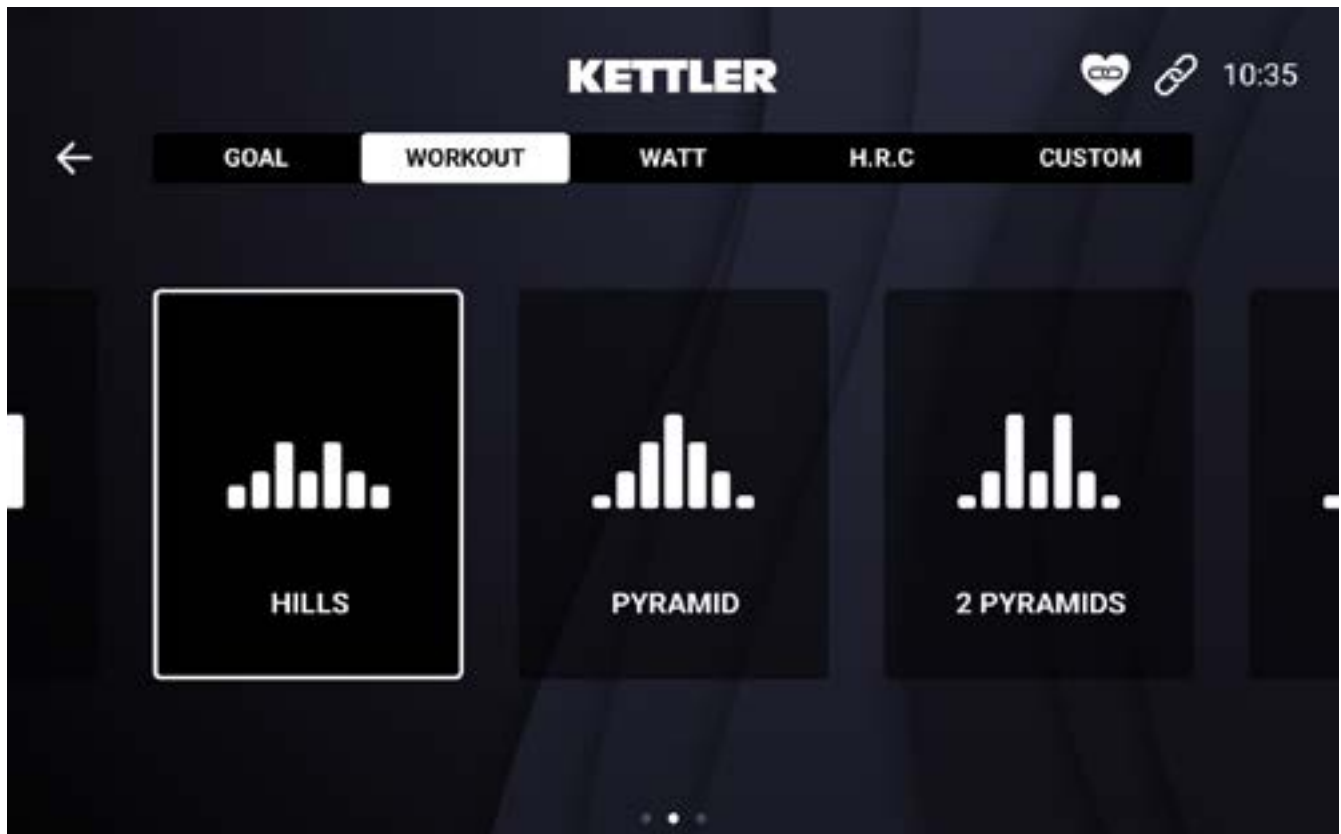

To start a workout with preset settings, select one of the nine programmes. The programme segments are evenly distributed over the set time.

SELECTION	DESCRIPTION
TIME	+ Set a time target value. + Adjustment range: 000:01–100:59
MAXIMUM LEVEL	+ Set the maximum resistance. + Adjustment range: 01–32

NOTICE

- + Refer to the chapter Training Display for an explanation of the displayed data.
- + In this programme, the segments change automatically.

To start a preset programme:

1. Tap WORKOUTS in the programme selection.
2. Enter your desired time value.
3. Enter your desired maximum resistance and maximum incline.
4. Tap .

An overview of the training profile is displayed.

5. Tap .

The programme starts.


6. Set the desired resistance and incline.
7. Tap  to pause the programme.
8. Tap  to resume the training.
- 8.1. Tap  in pause mode to end the programme.
9. The programme ends automatically when your time value is reached.

*After the workout is completed, a summary of your training data is displayed. Refer to the chapter **Training Summary**.*

10. Return to the Home area with .

→ ***You are in the Home area.***

3.6.4 Watt Programme

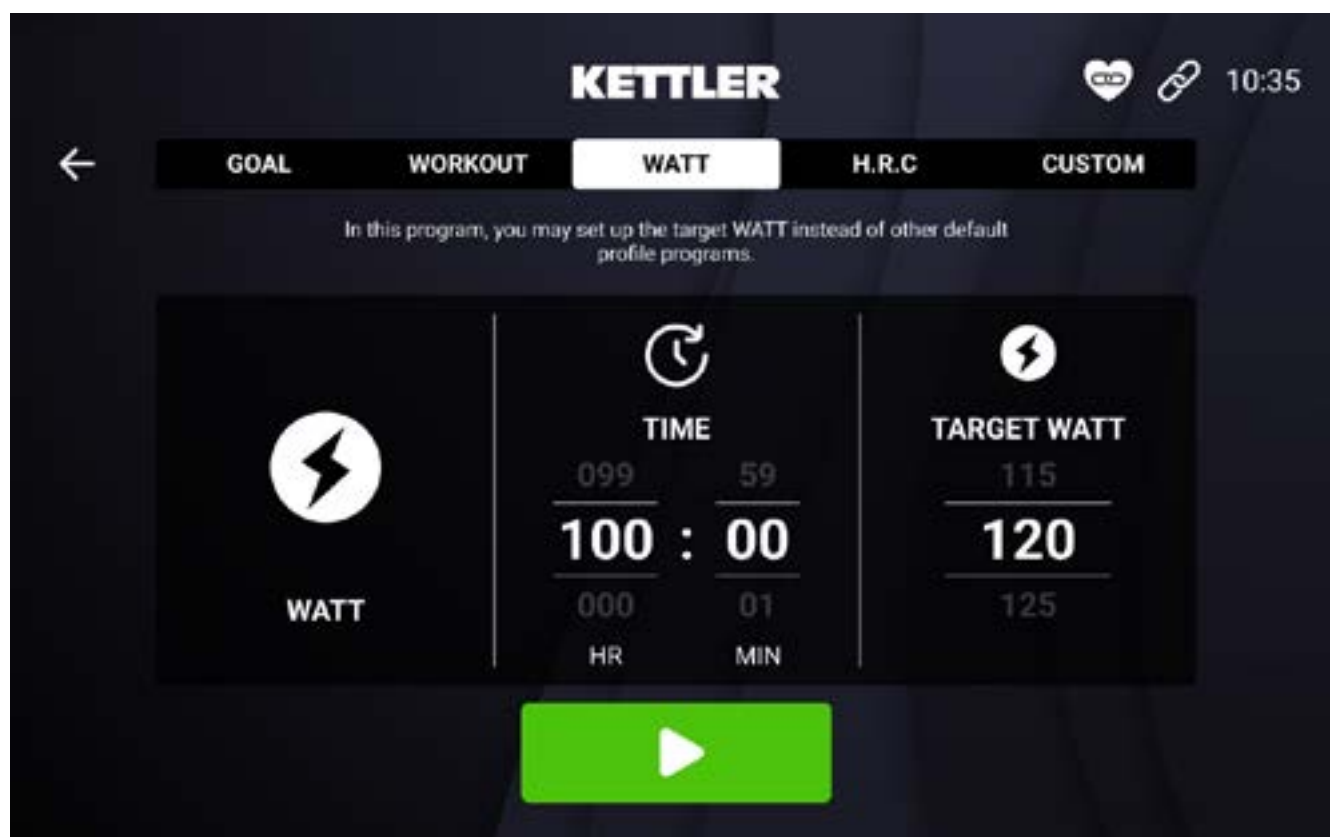

In the watt programme, you train at a constant power level. The device automatically adjusts the resistance to keep the set watt value as constant as possible, regardless of your pedaling speed.

SELECTION	DESCRIPTION
TIME	+ Set a time target value. + Adjustment range: 000:01–100:59
TARGET WATT	+ Set your desired target watt value. + Adjustment range: 50–600

NOTICE

- + Refer to the chapter Training Display for an explanation of the displayed data.
- + In this programme, the resistance is adjusted automatically.

To start the target watt programme:

1. Tap WATT in the programme selection.
2. Enter your desired time value.
3. Enter your desired target watt value.
4. Tap .

The programme starts.

5. Tap  to pause the programme.
6. Tap  to resume the training.
- 6.1. Tap  in pause mode to end the programme.


7. The programme ends automatically when your time value is reached.

*After the workout is completed, a summary of your training data is displayed. Refer to the chapter **Training Summary**.*

8. Return to the Home area with .

→ *You are in the Home area.*

3.6.5 Pulse Programme

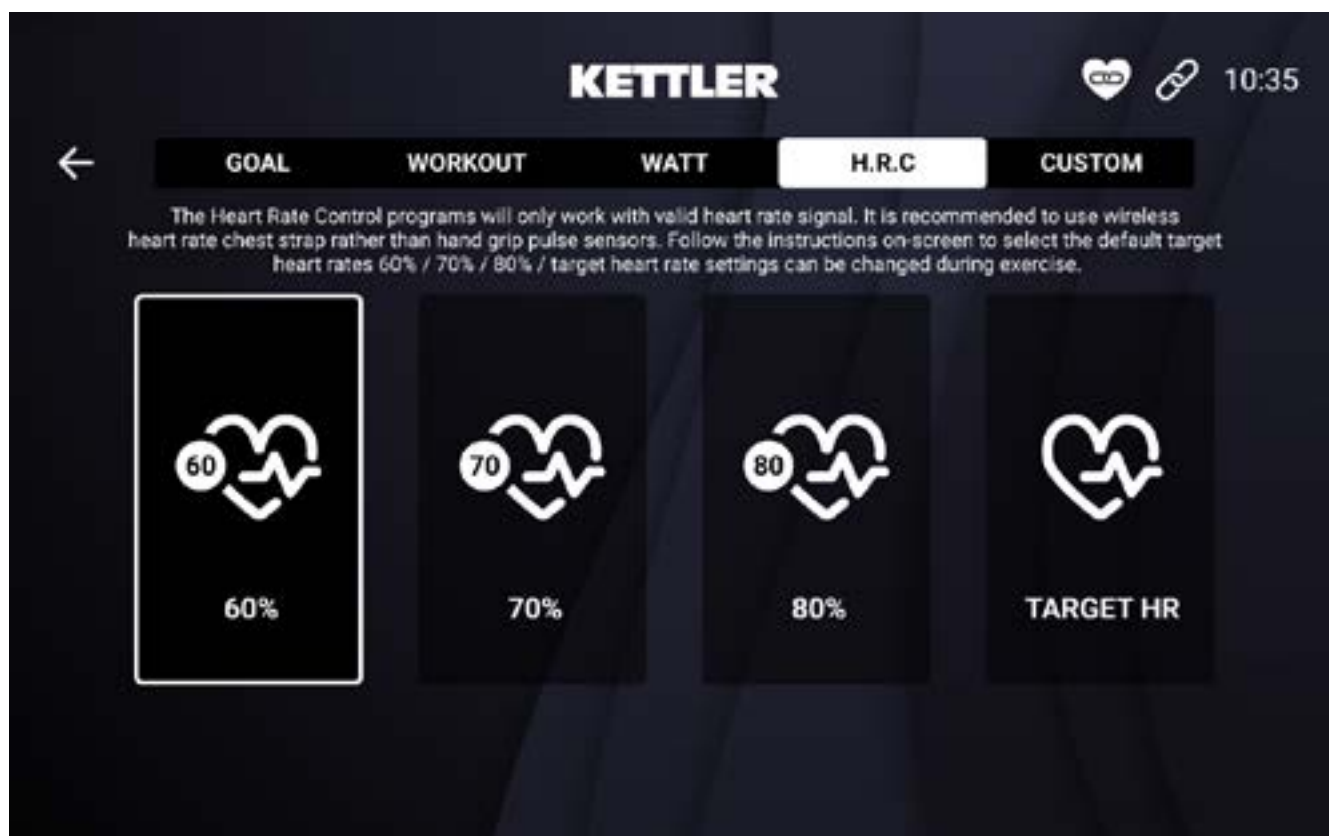

WARNING

Your training device is not a medical device. The heart rate measurement of this device may be inaccurate. Various factors can affect the accuracy of the heart rate display. The heart rate display is intended for training purposes only.

NOTICE

- + Use the hand pulse sensors or a wireless chest strap to monitor your heart rate.
- + Refer to the chapter Training Display for an explanation of the displayed data.
- + If no heart rate is detected, the workout will end automatically after 30 seconds.

With the pulse programme, you train based on your heart rate. The device automatically adjusts the resistance to maintain your target heart rate. Four heart rate programmes are available:

- + 60%
- + 70%
- + 80%

+ Custom value

To start the programme:

1. Tap Heart Rate Control in the programme selection.
2. Select a percentage value.

The settings menu for the programme opens.

NOTICE

The data from your user profile is applied. If you are logged in with a guest profile, enter your gender, age, and weight.

1. Enter the desired training time.
2. Adjust your target heart rate.
3. Tap .

The programme starts.

4. The resistance is adjusted automatically to reach your target value.
5. Tap  to pause the programme.
6. Tap  to resume the training.
- 6.1. Tap  in pause mode to end the programme.
7. The programme ends automatically when your time value is reached.

*After the workout is completed, a summary of your training data is displayed. Refer to the chapter **Training Summary**.*

8. Return to the Home area with .

→ *You are in the Home area.*

3.6.6 Custom Programme



With the custom programmes, you can create and permanently save your own training profiles. Up to four user programmes are available.

① NOTICE

- + Saved custom programmes can be modified at any time.
- + The created programme is saved immediately after the workout starts and can be started at any time.
- + In the guest profile, you can save up to four custom programmes.
- + Each user can also save up to four custom programmes.
- + Refer to the chapter **Training Display** for an explanation of the displayed data.

To create a custom workout:

1. Tap CUSTOM in the selection.
2. Tap the plus icon.

① NOTICE

The data from your user profile is applied. If you are logged in with a guest profile, enter your gender, age, and weight.

3. Adjust the resistance using  .
4. Set the duration of the segment.
5. Switch between segments using  .
6. Tap .

The programme starts.

7. Set the desired resistance and incline.
8. Tap  to pause the programme.
9. Tap  to resume the training.
- 9.1. Tap  in pause mode to end the programme.
10. The programme ends automatically when your time value is reached.

*After the workout is completed, a summary of your training data is displayed. Refer to the chapter **Training Summary**.*

11. Return to the Home area with .

→ *You are in the Home area.*

3.7 Training Display

During your workout, your training data is displayed. You can choose from three views:

- + Interval view 
- + Time view 
- + Lap view 

NOTICE

- + To switch the view, tap the corresponding button.
- + During most programmes, you can adjust the resistance in the training display.
- + Switch between the current and average value using .




The following table provides an overview of the values displayed during the workout:

SELECTION	DESCRIPTION
TRAINING TIME	Displays the training time
DISTANCE	Displays the training distance
WATT	Displays the current or average watt value
PULSE	Displays the current or average heart rate
LEVEL	<ul style="list-style-type: none"> + Displays the current resistance + Adjust the resistance
CALORIES	Displays the current or average calories burned
METS	Displays the distance covered

RPM	Displays the current or average cadence (RPM)
MAXIMUM SPEED	Displays your current or average speed
INCLINE	<ul style="list-style-type: none"> + Displays the current incline + Adjust the incline

3.8 Training Summary

At the end of a workout, your training data is summarized in the following view.

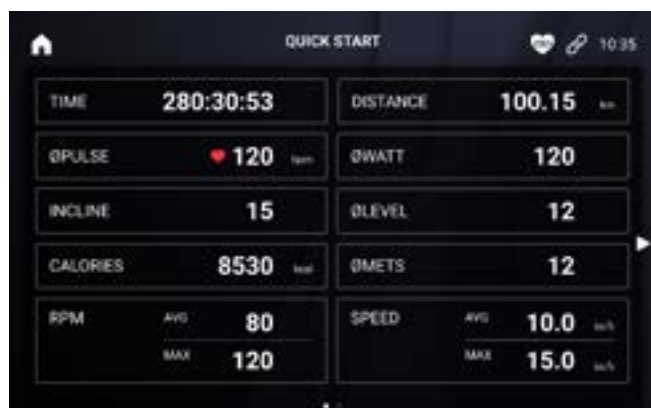

SELECTION	DESCRIPTION
PROGRAMME	Displays the completed programme
TRAINING TIME	Displays your training time
DISTANCE	Displays the distance covered
AVERAGE WATT	Displays your average watt value
AVERAGE HEART RATE	Displays your average heart rate
AVERAGE RESISTANCE	Displays the average resistance level
AVERAGE CALORIES	Displays the average calories burned
AVERAGE DISTANCE	Displays the average distance
AVERAGE/MAX RPM	Displays your average and maximum cadence (RPM)
AVERAGE/MAX SPEED	Displays your average and maximum speed
INCLINE	Displays the average incline

NOTICE


- + If no input is made for 3 minutes in the training summary, the device automatically returns to the Home area.
- + Tap to switch pages.

- To exit the training summary, tap .

→ You are in the Home area.

3.9 Journal

In the training log, your collected training data is displayed. This allows you to track your training progress more easily.

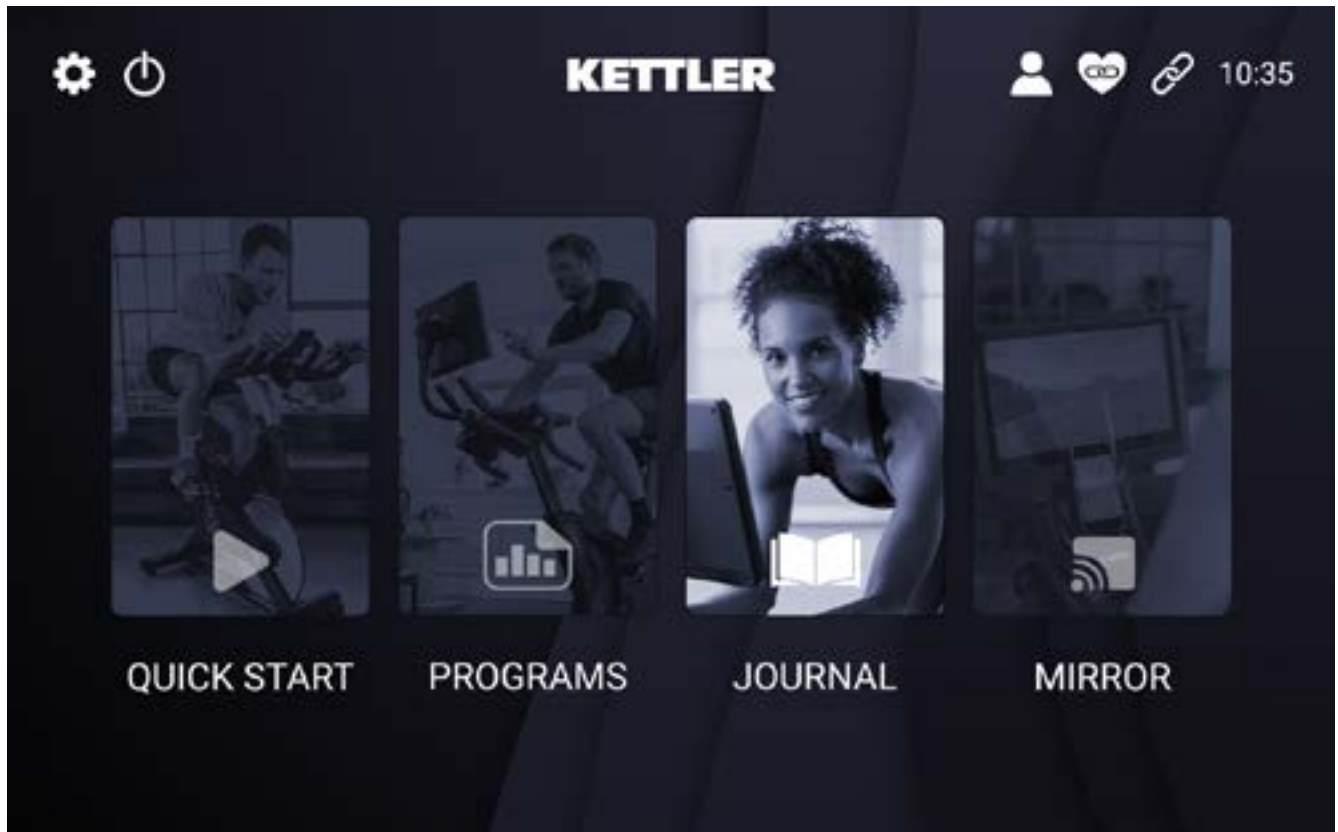

Prerequisite: You are in the Home area.

1. Tap .

The training log view opens.

- ① **NOTICE**
The training log contains a summary of your training sessions for the week, month, and year.
- 2. Export your training data using .
- ① **NOTICE**
 - + A USB stick must be connected to the console to export your data.
 - + The file is exported as a CSV file and can be opened, for example, in Excel or OpenOffice.

3.9.1 Journal: Period



The following table provides an overview of the data displayed in the training log:

DISPLAY		DESCRIPTION
Average values	AVG TIME	Displays the average values for this workout
	AVG DISTANCE	
	AVG CALORIES	
	AVG WATT	
	AVG RPM	
	AVG METERS	
	AVG LEVEL	
	AVG SPEED	
	AVG PULSE	
	AVG INCLINE	
TOTAL TIME		Displays the total training time
TOTAL DISTANCE		Displays the total training distance
TOTAL CALORIES		Displays the calories burned
MATRIX		Displays the training values in a bar chart

YEAR	Displays an overview of your training year
MONTH	Displays an overview of your training month
WEEK	Displays an overview of your training week

NOTICE


In the respective views, the average values for the selected period (week–month–year) are displayed.

1. To return to the Home area, tap .

→ *You are in the Home area.*

3.10 Mirror

Mirror your device's screen to the console.

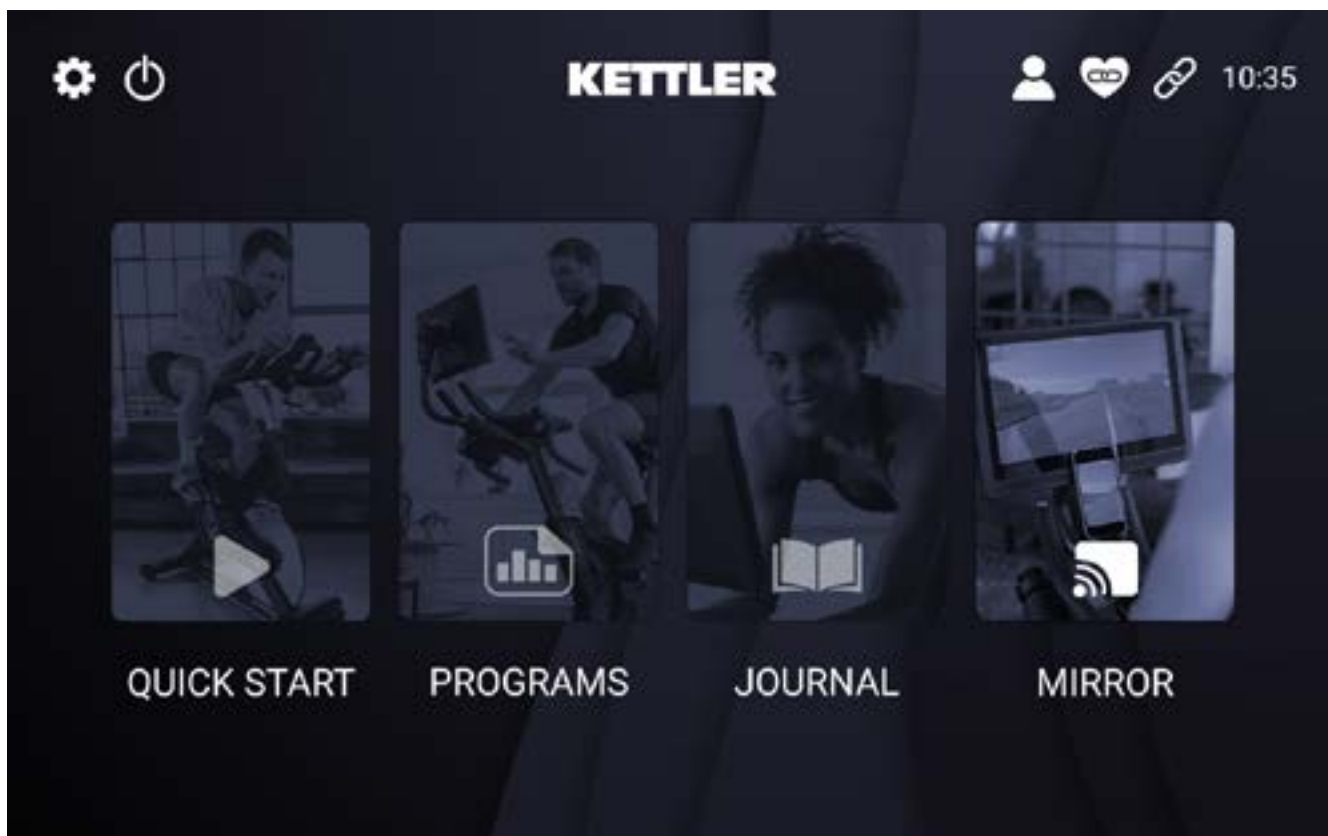

► **CAUTION**

Please note that some apps do not support screen mirroring. If you experience issues, contact the app provider.

1. Tap .


① **NOTICE**

Refer to the instructions for your iOS or Android device.

2. Once your device is connected, tap .




The workout starts.

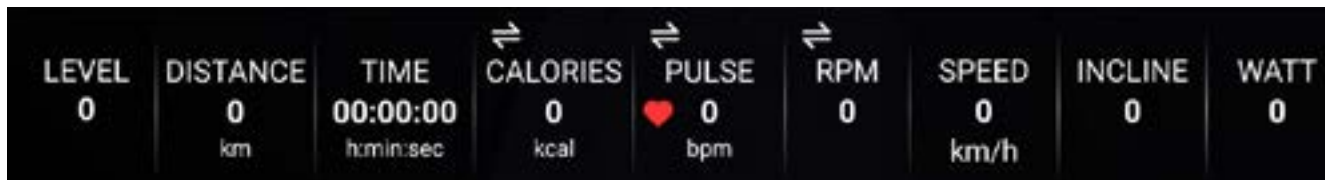

3. Tap  to switch between training views.
4. To display the training data, tap .
5. To return to the mirrored screen, tap .

NOTICE

To stop mirroring, go to the settings on your device.

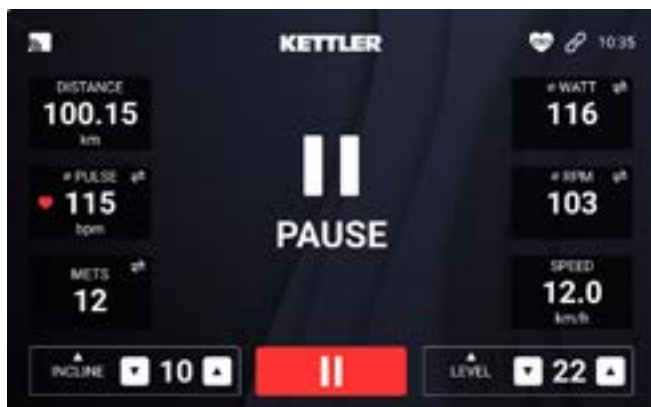

6. Tap  to pause the programme.
7. Tap  to resume the training.
- 7.1. Tap  in pause mode to end the programme.

*After the workout is completed, a summary of your training data is displayed. Refer to the chapter **Training Summary**.*

8. Return to the Home area with .

→ *You are in the Home area.*

3.11 USB-C Port

This console has a USB-C port which you can use to charge your device.

NOTICE

- + Charge your device via the console – you will need a USB-C cable to do this.
- + **A USB-C cable is not included.**

3.12 Watt Table

This table provides an overview of the generated watt values in relation to the resistance and cadence.

RESISTANCE/RPM	20	30	40	50	60	70	80	90	100	110	120
Level 1	6	11	15	19	20	29	35	40	46	52	57
Level 2	9	16	21	27	30	41	49	55	64	71	78
Level 3	12	20	28	36	40	53	63	71	81	91	99
Level 4	15	25	35	45	50	66	78	87	99	110	120
Level 5	17	30	42	53	60	78	92	103	116	129	141
Level 6	20	35	48	62	70	90	106	119	134	149	162
Level 7	23	39	55	71	80	103	120	135	151	168	183
Level 8	25	44	62	79	90	115	134	151	169	188	204
Level 9	28	49	69	88	100	128	148	167	186	207	225
Level 10	31	54	75	97	110	140	162	183	204	226	246
Level 11	33	58	82	105	120	152	176	199	221	246	267
Level 12	36	63	89	114	130	165	191	215	239	265	288
Level 13	39	68	96	123	141	177	205	231	256	285	309
Level 14	41	72	102	131	152	189	219	247	274	304	330
Level 15	44	77	109	140	163	202	233	262	291	324	352
Level 16	47	82	116	148	174	214	247	278	309	343	373
Level 17	50	87	123	157	185	227	261	294	326	362	394
Level 18	52	91	129	166	196	239	275	310	344	382	415
Level 19	55	96	136	174	207	251	290	326	361	401	436
Level 20	58	101	143	183	218	264	304	342	379	421	457
Level 21	60	106	150	192	229	276	318	358	396	440	478
Level 22	63	110	156	200	240	288	332	374	414	459	499
Level 23	66	115	163	209	251	301	346	390	432	479	520
Level 24	68	120	170	218	262	313	360	406	449	498	541
Level 25	71	125	177	226	273	325	374	422	467	518	562
Level 26	74	129	183	235	284	338	388	438	484	537	583
Level 27	76	134	190	243	295	350	403	453	502	556	604
Level 28	79	139	197	252	306	363	417	469	519	576	625
Level 29	82	143	204	261	317	375	431	485	537	595	646
Level 30	84	148	210	269	328	387	445	501	554	615	668
Level 31	87	153	217	278	339	400	459	517	572	634	689
Level 32	90	158	224	287	350	412	473	533	589	654	710

4.1 General Instructions

When training, it is important to perform the exercises correctly in order to avoid injuries and achieve the desired training effect. Make sure you use the correct technique and train at an appropriate intensity level. Always consult an expert such as a trainer or doctor if you are unsure or have health problems. Always start your training with a low load and increase it evenly and gently.

End your training with a cool-down phase. If you have any questions or uncertainties, contact your doctor.

4.1.1 Training clothes

During training, wear appropriate sports clothing that is comfortable and breathable. Avoid clothing that restricts you or is uncomfortable. Make sure that your shoes are suitable and offer you sufficient support. In addition, always carry a towel with you to wipe away sweat and keep the equipment clean.

4.1.2 Warming up and stretching

It is important to warm up and stretch properly before training to avoid injury and improve performance. Stretching helps to loosen muscles and improve flexibility. Be sure to incorporate a short stretching routine before each workout.

Warm-up exercise:

1. Stand upright with your feet about shoulder-width apart.
2. Start with gentle arm circles by slowly moving your arms forwards in small circles in a controlled manner.
3. Perform arm circles backwards to loosen your shoulders and arms.
4. Do squats by slowly squatting down and then straightening up again. Make sure that your knees do not extend beyond your toes.



CAUTION

Do not exercise with sore muscles or take it easy on the affected muscles, as this can lead to injuries.



4.1.3 Medication

If you regularly take medication and want to exercise, it is important to be aware of possible side effects. Ask your doctor whether your medication affects your workout.

4.1.4 Used muscle groups

This training uses the following muscle groups:

- + Gluteal muscle
- + Leg muscles

Make sure you keep your back straight during training. Do not hunch over and do not arch your back.

4.1.5 Exercise frequency

Regular exercise is crucial to making progress and staying healthy in the long term. Continuous exercise can strengthen muscles, improve endurance and enhance overall well-being. Remember that even small workouts can be done regularly to achieve long-term results.

Training with heart rate orientation

Heart rate orientation guarantees an extremely effective and healthy training. Through your age and the following table, you can quickly and easily read and determine the optimal pulse for your training. An acoustic alarm will sound if your heart rate exceeds the set target heart rate. Which target heart rate is important for which training goal can be found out in the following.

Fat burning (weight management): The main goal here is to burn deposits of fat. In order to achieve this training goal, a low training intensity (approximately 55% of the maximum heart rate) and a longer training period are required.


Cardiovascular training (cardio training): The primary goal is to increase stamina and fitness through an improved provision of oxygen through the cardiovascular system. In order to achieve this training goal, medium intensity (approximately 75% of the maximum heart rate) with a medium training period is required.

Anaerobic (maximum) load training: The main goal of maximum load training is to improve recovery after short, intense loads in order to be able to quickly return to the aerobic zone. In order to achieve this training goal, a high intensity (approximately 90% of the maximum heart rate) with short, intense load is required, which is followed by a recovery phase in order to prevent muscle fatigue.

Example:

For a 45-year-old man, the maximum heart rate is 175 ($220 - 45 = 175$).

- + The fat burning target zone (55%) is at approximately 96 beats/min. = $(220 - \text{age}) \times 0.55$.
- + The cardio target zone (75%) is at approximately 131 beats/min. = $(220 - \text{age}) \times 0.75$.
- + The maximum heart rate for an anaerobic load training (90%) is at approximately 157 beats/min. = $(220 - \text{age}) \times 0.9$.

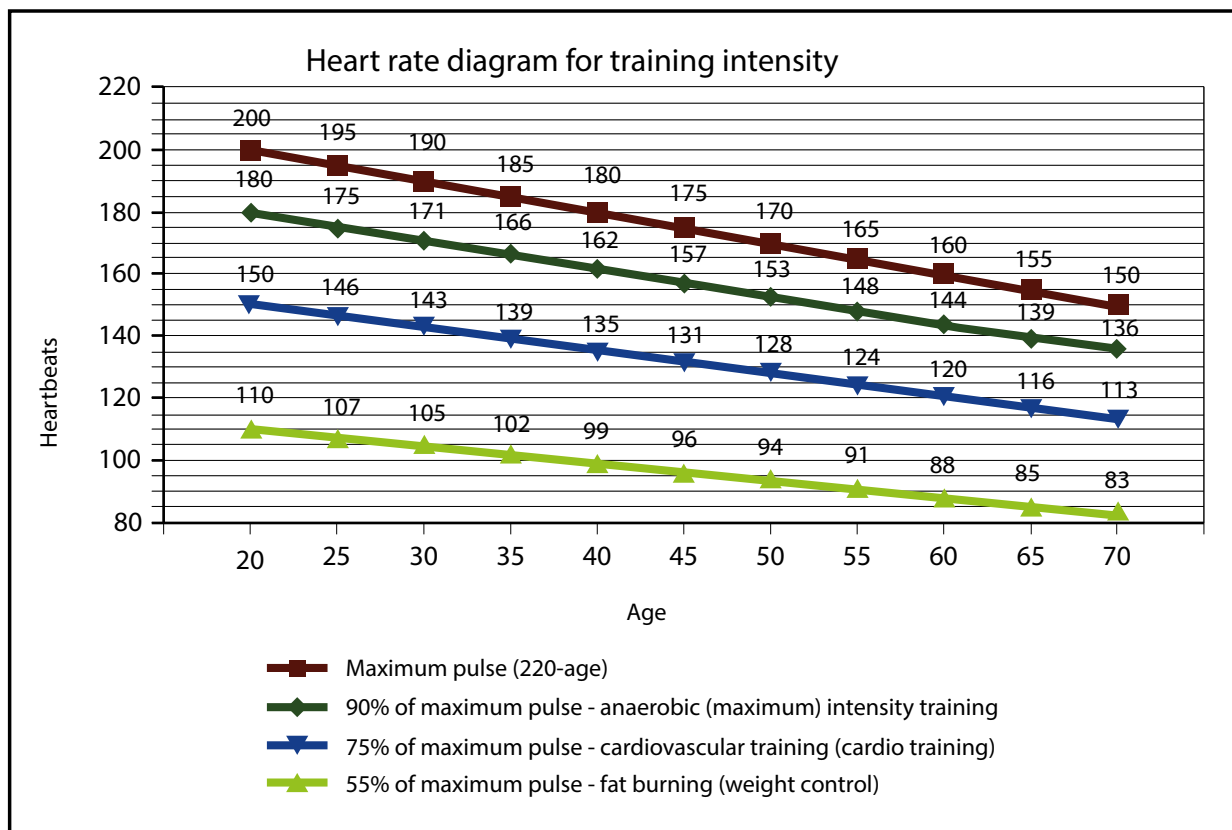

4.2 Workout journal

[illegible]

Date _____



Distance



Time (min.)



Resistance level



Training weight



Ø Pulse



Calories burnt



I feel ...



Body weight

4.3 Wireless Connection and Fitness Apps



This console is equipped with a wireless interface. Please take note that your mobile device needs to be compatible with the wireless interface of the treadmill.

To use training apps you will have to activate the wireless connection function on your mobile device (tablet or smart phone) and start the fitness app. Select your fitness equipment. Please follow the instructions given in the app. You will find the name of your fitness equipment on a small sticker on the back of the console.

You will find the fitness apps in the app stores of Google or Apple. There you will find the apps "Kinomap" or "Zwift". Please note that these apps are produced by an external manufacturer. Fitshop does not take any responsibility regarding the availability, functionality or contents of these programmes.

IMPORTANT NOTE

Some entertainment apps are provided and maintained by third-party providers. Pre-installed apps may change, be updated, or be removed over time. These changes are normal and do not affect your statutory warranty rights. To make sure the pre-installed apps are working correctly, they must be updated regularly. If needed, the respective app will notify you to do so. To update the app, you need a google account. A google email is sufficient. Just follow the instructions on the screen to perform the update. Please note: The system is set up only for the pre-installed apps. Do not install any additional apps as their proper functionality can not be guaranteed. The installation of other apps might cause technical issues.

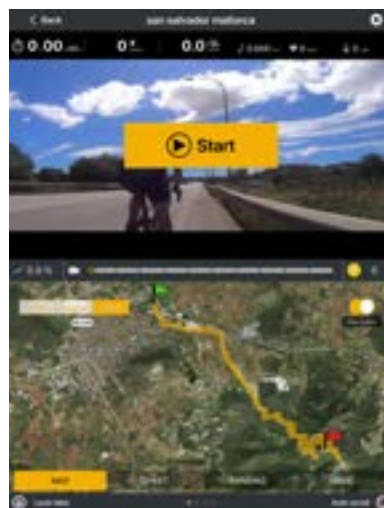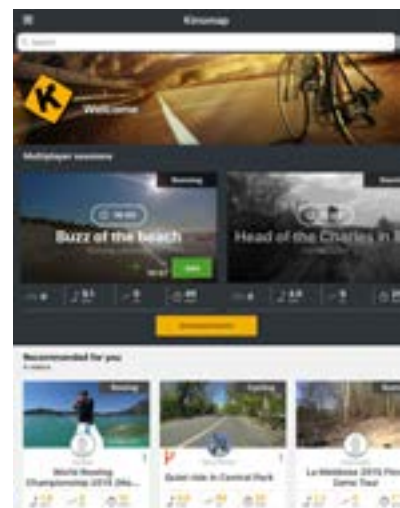

Example: Kinomap

5.1 General Instructions

WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

► ATTENTION


- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

5.2 Transportation Wheels

► ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

1. Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
2. Select the new location by following the instructions in the section 1.5 of this manual.

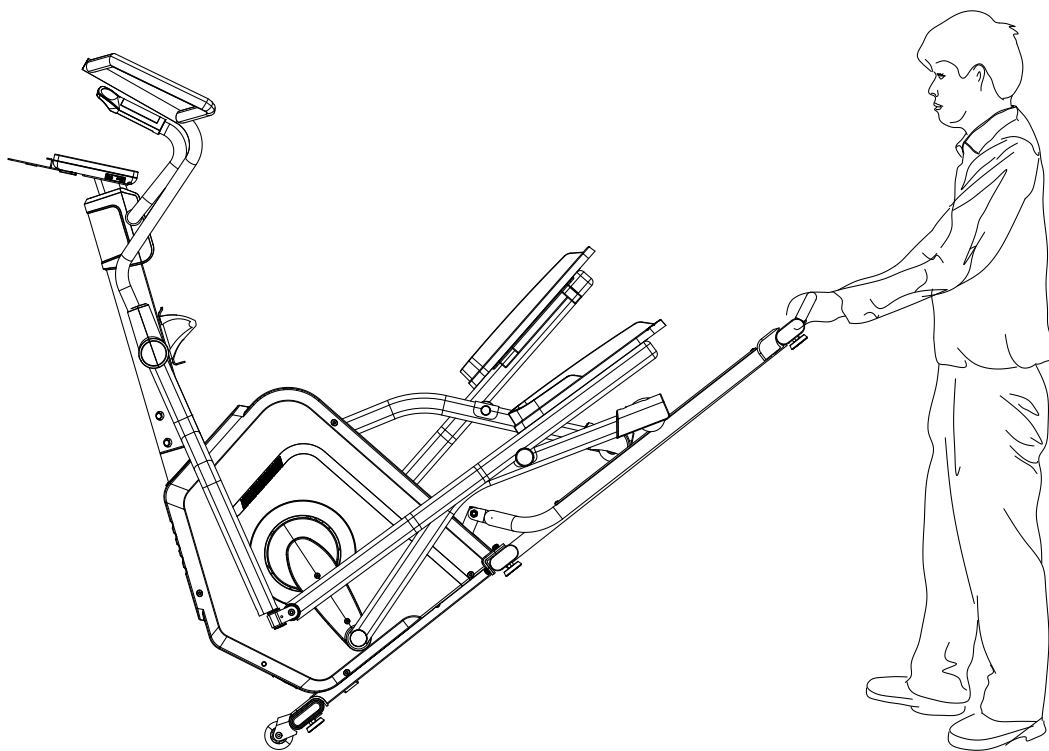

6.1 General Instructions



WARNING

- + Do not make any improper changes to the equipment.



CAUTION

- + Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

► ATTENTION

- + In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

6.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Drive disks wobble/ make noises	Drive disk loose	Tighten nut (pay attention to left-hand / right-hand thread)
Display is blank/is not working	Loose cable connections	Check cable connections
Equipment wobbles	Equipment is not level	Align the feet
Creaking noises on the stepping area	Loose screws on stepping area	Tighten the screws on the stepping area
Creaking noises	Screw connections loosened or too tight	Check screw connections
Squeaking noises on the guide rails	Guide rails or rollers dirty or guide rails dry	Clean the guide rails and then lubricate them with a suitable lubricant

No pulse display	<ul style="list-style-type: none"> + Sources of interference in the room + unsuitable chest strap + Wrong position of chest strap + Chest strap defective or battery empty + Pulse display defective 	<ul style="list-style-type: none"> + Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc. ...) + Use a suitable chest strap (see RECOMMENDED ACCESSORIES). + Reposition chest strap and/or moisten electrodes + Changing batteries + Check if pulse display by hand pulse possible
Wi-Fi cannot be connected	<ul style="list-style-type: none"> + Incorrect password + Special characters in the password + Wi-Fi frequency not suitable 	<ul style="list-style-type: none"> + Change Wi-Fi password + Establish Internet connection via a hotspot + The date, time and time zone must be set correctly

6.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

Please contact the contract partner for technical support.

6.4 Maintenance and Inspection Calendar

To avoid damage from sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Display console	C	I	
Slide rails*		C	
Lubrication of slide rails and moving parts*			I
Plastic covers	C	I	
Screws and cable connections		I	
Legend: C = clean; I = inspect			

*Make sure to always clean the slide rails and moving parts before re-lubricating.

By scanning the QR-code with the camera function or QR-code scanner app of your smartphone/tablet, a video on general maintenance of a crosstrainer opens on YouTube. The video serves to illustrate the maintenance points described in this manual.

Please note that the video may not be available in your language or with appropriate subtitles.

If you cannot scan QR-codes, you can access all Fitshop videos on YouTube by first opening YouTube and entering "Fitshop" in the search field.



7 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

8 RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For elliptical cross trainers this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible **chest strap**, as this ensures optimum transmission of the heart rate.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR-code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



chest strap



floor mat



silicone spray



chest strap contact gel

9.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 11 of this operating manual.

 NOTICE

The serial number of your equipment is unique. It's located on a white sticker.

Enter the serial number in the appropriate field.

Serial number:

Brand / Category:

Model Name:

Article Number:

9.2 Parts List

No.	Name	Supplier Parts No.	Qty.
A	Computer set		1
A-1	Computer	768S0-6-2501-B2	1
A-2	Bolt M5x0.8x10L	52605-2-0010-F0	4
B	Bottle holder	848B2-6-2074-00	1
C	Handlebar post complete assembly		1
C-1	Handlebar post welding set	768S0-3-2000-J1	1
C-2	Computer fixing plate	768S0-3-2725-02	1
C-3	Bolt M10*1.5*75L	50110-2-0075-F3	1
C-4	Flat washer D20*D11*2T	55110-1-2020-FA	1
C-5	Nylon nut M10*1.5*10T	55210-1-2010-FA	1
C-6	Upper computer cable 700L	768S0-6-2572-02	1
C-7	C ring S-17(1T)	55517-1-0010-00	2
C-8	Upper handle pulse cover	747S0-6-2517-B0	2
C-9	Lower handle pulse cover	747S0-6-2518-B0	2
C-10	Bolt M3*0.5*30L	54203-2-0030-F0	4
C-11	Bolt M3*0.5*12L	54203-2-0012-F0	2
C-12	Quick key lower cable (1)	734S5-6-2544-00	1
C-13	Quick key lower cable (2)	734S5-6-2536-00	1
C-14	Membrane button (LEVEL)	768S0-6-2533-00	1
C-15	Membrane button (INCLINE)	768S0-6-2534-00	1
C-16	Membrane button transfer board	734S5-6-2467-00	2
C-17	Screw M5*0.8*15L	52605-2-0015-F0	2
C-18	Grounding wire 1 50L	766S0-6-3486-00	1
C-19	Screw M5*0.8*10L	54805-2-0010-N0	1
D	Main frame set		1
D-1	Main frame	768S0-3-1000-J2	1
D-2	Bearing #6004ZZ-2RS(C0)	58006-6-1040-01	2
D-3	Lower computer cable 1000L	768S0-6-2573-02	1
D-4	Screw ST4*1.41*13L,D10	54704-2-0013-F0	1
D-5	Grounding wire 200L*4.8	753S0-6-3486-01	1
D-6	Sensor cable 450L	815G0-6-2576-00	1

D-7	Incline motor	768S0-6-5172-01	1
D-8	Control board	747S3-6-2597-00	1
D-9	Bolt M10*1.5*100L	50110-5-0100-F5	1
D-10	Screw ST4.2*15L	52842-2-0015-F0	2
D-11	Live wire 300L	747S3-6-3480-00	1
D-12	Neutral wire 300L	747S3-6-3479-00	1
D-13	Flexible conduit 1 D10*300L	747S3-6-3483-00	1
D-14	Grounding wire 2 100L	26100-6-1788-00	1
D-15	Buffer D10*D25*2T	768S0-6-1081-B0	2
D-16	Magnetic ring (big)	755S0-6-2979-00	1
D-17	Magnetic ring (small)	755S0-6-2977-00	1
D-18	Filter	755S0-6-3289-00	1
D-19	Magnetic ring (Square)	755S0-6-2978-00	1
D-20	Live wire 100L	768S0-6-1789-00	1
D-21	Neutral wire 100L	768S0-6-1791-00	1
D-22	Bushing	755S0-6-2288-00	2
D-23	Screw ST3*20L	50903-2-0020-D0	2
C-5	Nylon nut M10*1.5*10T	55210-1-2010-FA	1
E	Supporting tube for moveable handlebar set		1
E-1	Supporting tube for left movable handlebar	768S0-3-3710-J1	1
E-2	Supporting tube for right movable handlebar	768S0-3-3711-J1	1
E-3	Bearing #6003-2RS	58006-6-1018-01	4
E-4	Bolt M6*1.0*10L	54006-5-0010-F0	2
F	Front stabilizer assembly set		1
F-1	Front stabilizer	768S0-3-2100-J1	1
F-2	Oval cap 40*100*46.3L	755S0-6-2173-B0	2
F-3	Round wheel	846C2-6-2175-00	2
F-4	Adjustable wheel	76100-6-2174-B0	2
F-5	Bolt M8*1.25*40L	50308-5-0040-F3	2
F-6	Nylon nut M8*1.25*8T	55208-1-2008-FA	2
G	Slide beam assembly set		1
G-1	Rear stabilizer welding set	768S0-3-2112-J1	1
G-2	Slide beam welding set	768S0-3-5100-J1	1
G-3	Flat washer D30*D8.5*2T	55108-1-3020-FA	4

G-4	Oval cap 40*80*33L	55333-3-4080-B8	4
G-5	Rear stabilizer cover	742D2-6-2188-B0	1
G-6	Screw ST4*1.41*12L	52804-2-0012-F0	2
G-7	Slide beam guiding plate	768S0-6-5171-00	2
G-8	Screw M6*1*12L	54806-2-0012-N0	4
G-9	Fixing axle	742S2-6-3821-N0	2
G-10	Bolt M8*1.25*20L	50308-5-0020-UF0	4
F-4	Adjustable wheel	76100-6-2174-B0	4
H	Pedal set		1
H-1	Left pedal	58029-6-1172-B0	1
H-2	Right pedal	58029-6-1173-B0	1
H-3	Bolt M6*1*10L	52606-2-0010-F0	8
I	Crank set		1
I-1	Crank welding set	768S0-3-2700-J0	2
I-2	Crank cover	76100-6-4524-B0	2
I-3	C-key	76702-6-3107-00	2
I-4	Bolt M10*1.5*65L	50110-28-0065-FA	2
I-5	Nut M10*1.5*8T	55210-A-2008-FA	4
I-6	Spring washer D17.8*D10.2*3T	55110-2-1730-FA	2
C-17	Bolt M5*0.8*15L	52605-2-0015-F0	4
J	Chain cover set		1
J-1	Left chain cover	768S0-6-4501-B0	1
J-2	Right chain cover	768S0-6-4502-B0	1
J-3	Gasket	768S0-6-4510-B0	1
J-4	Pin D6*26.5*7.7	71600-6-4586-60	9
J-5	Switching mode power supplier	755S0-6-2559-00	1
J-6	Screw ST2.9*13L	51029-2-0013-F0	2
J-7	Power supply cover	768S0-6-4527-B0	1
D-10	Screw ST4.2*15L	52842-2-0015-F0	10
K	Moving wheel cover		1
K-1	Left moving wheel	742S2-6-6005-01	1
K-2	Right moving wheel	742S2-6-3898-B0	1
L	Idle wheel fixing plate set		1
L-1	Fixing plate of idle wheel	742G0-6-1601-N1	1


L-2	Flat washer D24*D16*1.5T	55116-1-2415-NA	1
L-3	Bearing #99502	58006-6-1016-00	2
L-4	Bolt M8*1.25*30L	50308-5-0030-C0	1
L-5	Plastic washer D10*D24*0.4T	55110-1-2404-BF	2
L-6	Flat washer D28*D8.5*3T	55108-1-2830-NA	1
L-7	Idle wheel axle	73151-6-1602-01	1
L-8	Nut M8*1.25*6T	55208-2-2006-NA	2
L-9	Nylon nut M6x1.0x6T	55206-1-2006-CA	2
L-10	Bolt MM6*65L	50106-2-0065-N0	1
L-11	Fixing plate	815G0-6-1673-N0	2
L-12	Bolt M6x1.0x15L	50106-5-0015-C0	2
L-13	Nut M6*1*5T	55206-2-2005-NA	3
L-14	Bolt M8*1.25*16L	51608-5-0016-F0	1
F-6	Nylon nut M8*1.25*8T	55208-1-2008-FA	1
M	Belt wheel set		1
M-1	Crank axle welding set	76702-3-2903-00	1
M-2	Belt wheel	58008-6-1028-00	1
M-3	Belt 430,PJ6	58004-6-1141-00	1
M-4	C ring D22.5*D18.5*1.2T	55519-1-2312-DA	2
M-5	Waved washer D27*D20.3*0.5T	55120-5-2705-DA	1
M-6	Flat washer D26*D21*1.5T	55120-1-2615-NA	1
M-7	Flat washer D25*D5.2*2T	55105-1-2520-FA	2
M-8	Bolt M5*0.8*10L	54005-5-0010-F0	2
M-9	Round magnet	742G0-6-2574-00	1
L-9	Nylon nut M6x1.0x6T	55206-1-2006-CA	4
L-12	Bolt M6x1.0x15L	50106-5-0015-C0	4
N	Assembly kit	768S0-3-8100-00	1
N-1	Bolt M8x1.25x20L	75402-6-3191-F0	18
N-2	Bolt cover	75402-6-2779-B0	10
N-3	Bolt M8*1.25*20L	50108-2-0020-U0	2
N-4	Flat washer D25xD8.5x2T	55108-1-2520-FA	6
N-5	Buffer D21*D8.2*2.5T	747S0-6-1081-B0	4
N-6	Axle cover	196A0-6-3876-B0	2
N-7	Waved washer D26*D19.5*0.3T	55119-5-2603-DA	2


N-8	Plastic washer D10*D24*0.4T	55110-1-2404-BF	2
N-9	Flat washer D30*D19.2*2T	55119-1-3020-FA	2
N-10	Screw ST4.2*15L	52842-2-0015-F0	14
N-11	Bolt M5*0.8*10L	52605-2-0010-F0	4
N-12	Bolt M10*1.5*55L	50110-5-0055-F3	1
N-13	Nylon nut M10*1.5*10T	55210-1-2010-FA	1
N-14	Bolt M8x1.25x20	50108-5-0020-UF0	4
N-15	Open wrench 135*5T	58030-6-1068-C0	2
N-16	Cross Screwdriver PH2*100	58030-6-1058-B0	1
O	Moveable handlebar set		
O-1	Handlebar(Left)	768S0-3-2430-J0	1
O-2	Handlebar(Right)	768S0-3-2450-J0	1
O-3	Left dip foam	58015-6-1458-B0	1
O-4	Right dip foam	58015-6-1459-B0	1
P	Computer bracket set		1
P-1	Front computer bracket	747S0-6-2592-B0	1
P-2	Rear computer bracket	747S0-6-2593-B0	1
Q	Flywheel set		1
Q-1	EMS magnet system	768S0-2-3100-00	1
Q-2	System connecting cable 500L	738G0-6-3177-00	1
Q-3	Screw M6*1.0P*16L	815S1-6-3191-F0	4
D-16	Magnetic ring (big)	755S0-6-2979-00	1
R	Pad holder Set		1
R-1	Pad holder	75402-6-2466-J0	1
R-2	Buffer strip 1	75402-6-2088-B0	1
R-3	Buffer strip 2	75402-6-2089-B0	1
S	Slide Beam cover	768S0-6-4080--B0	1
T	Left Pedal supporting tube set		1
T-1	Left pedal welding set	768S0-3-6000-J1	1
T-2	Supporting tube for left pedal	768S0-3-3810-J0	1
T-3	Pedal bottom bracket welding set	76702-3-3804-J0	1
T-4	Bushing D19.15x(D25.6x32)xL(17+3)	58002-6-1051-B0	2
T-5	Moving wheel	73800-6-3886-B3	1
T-6	Bearing 6002 ZZ	58006-6-1032-00	2

T-7	Washer D15*D21*0.3T	55115-5-2103-DA	1
T-8	C ring S-15(1T) D15	768S0-6-3872-00	1
T-9	Waved washer D26*D19.5*0.3T	55119-5-2603-DA	1
T-10	Flat washer D30*D19.2*2T	55119-1-3020-FA	1
T-11	Flat washer D25xD8.5x2T	55108-1-2520-FA	3
T-12	Bolt M8x1.25x20	50108-2-0020-U0	1
T-13	Axle cover	196A0-6-3876-B0	1
T-14	Oval cap	55328-3-2550-B1	1
T-15	Square cap	55310-2-2550-B8	2
T-16	Short axle	768S0-6-3890-N0	1
T-17	Waved washer D22xD17x0.3T	55117-5-2203-DA	2
T-18	Screw M8*1.25*75L	54008-5-0075-F0	1
T-19	Axle sleeve	768S0-6-2090-B0	2
C-7	C ring S-17(1T)	55517-1-0010-00	1
E-3	Bearing #6003-2RS	58006-6-1018-01	4
F-6	Nylon nut M8*1.25*8T	55208-1-2008-FA	1
U	Right Pedal supporting tube set		1
U-1	Right pedal welding set	768S0-3-6025-J1	1
U-2	Supporting tube for right pedal	768S0-3-3811-J0	1
T-3	Pedal bottom bracket welding set	76702-3-3804-J0	1
T-4	Bushing D19.15x(D25.6x32)xL(17+3)	58002-6-1051-B0	2
T-5	Moving wheel	73800-6-3886-B3	1
T-6	Bearing 6002 ZZ	58006-6-1032-00	2
T-7	Washer D15*D21*0.3T	55115-5-2103-DA	1
T-8	C ring S-15(1T) D15	768S0-6-3872-00	1
T-9	Waved washer D26*D19.5*0.3T	55119-5-2603-DA	1
T-10	Flat washer D30*D19.2*2T	55119-1-3020-FA	1
T-11	Flat washer D25xD8.5x2T	55108-1-2520-FA	3
T-12	Bolt M8x1.25x20	50108-2-0020-U0	1
T-13	Axle cover	196A0-6-3876-B0	1
T-14	Oval cap	55328-3-2550-B1	1
T-15	Square cap	55310-2-2550-B8	2
T-16	Short axle	768S0-6-3890-N0	1
T-17	Waved washer D22xD17x0.3T	55117-5-2203-DA	2

T-18	Screw M8*1.25*75L	54008-5-0075-F0	1
T-19	Axle sleeve	768S0-6-2090-B0	2
C-7	C ring S-17(1T)	55517-1-0010-00	1
E-3	Bearing #6003-2RS	58006-6-1018-01	4
F-6	Nylon nut M8*1.25*8T	55208-1-2008-FA	1
V	Power cable 1700L	26100-6-1775-02	1
W	Handlebar cover set		1
W-1	Front handlebar cover	768S0-6-3780-B0	2
W-2	Rear handlebar cover	768S0-6-3781-B0	2
X	Pedal tube cover set		1
X-1	Left cover for pedal tube	768S0-6-3888-B0	2
X-2	Right cover for pedal tube	768S0-6-3889-B0	2

9.3 Exploded Drawing

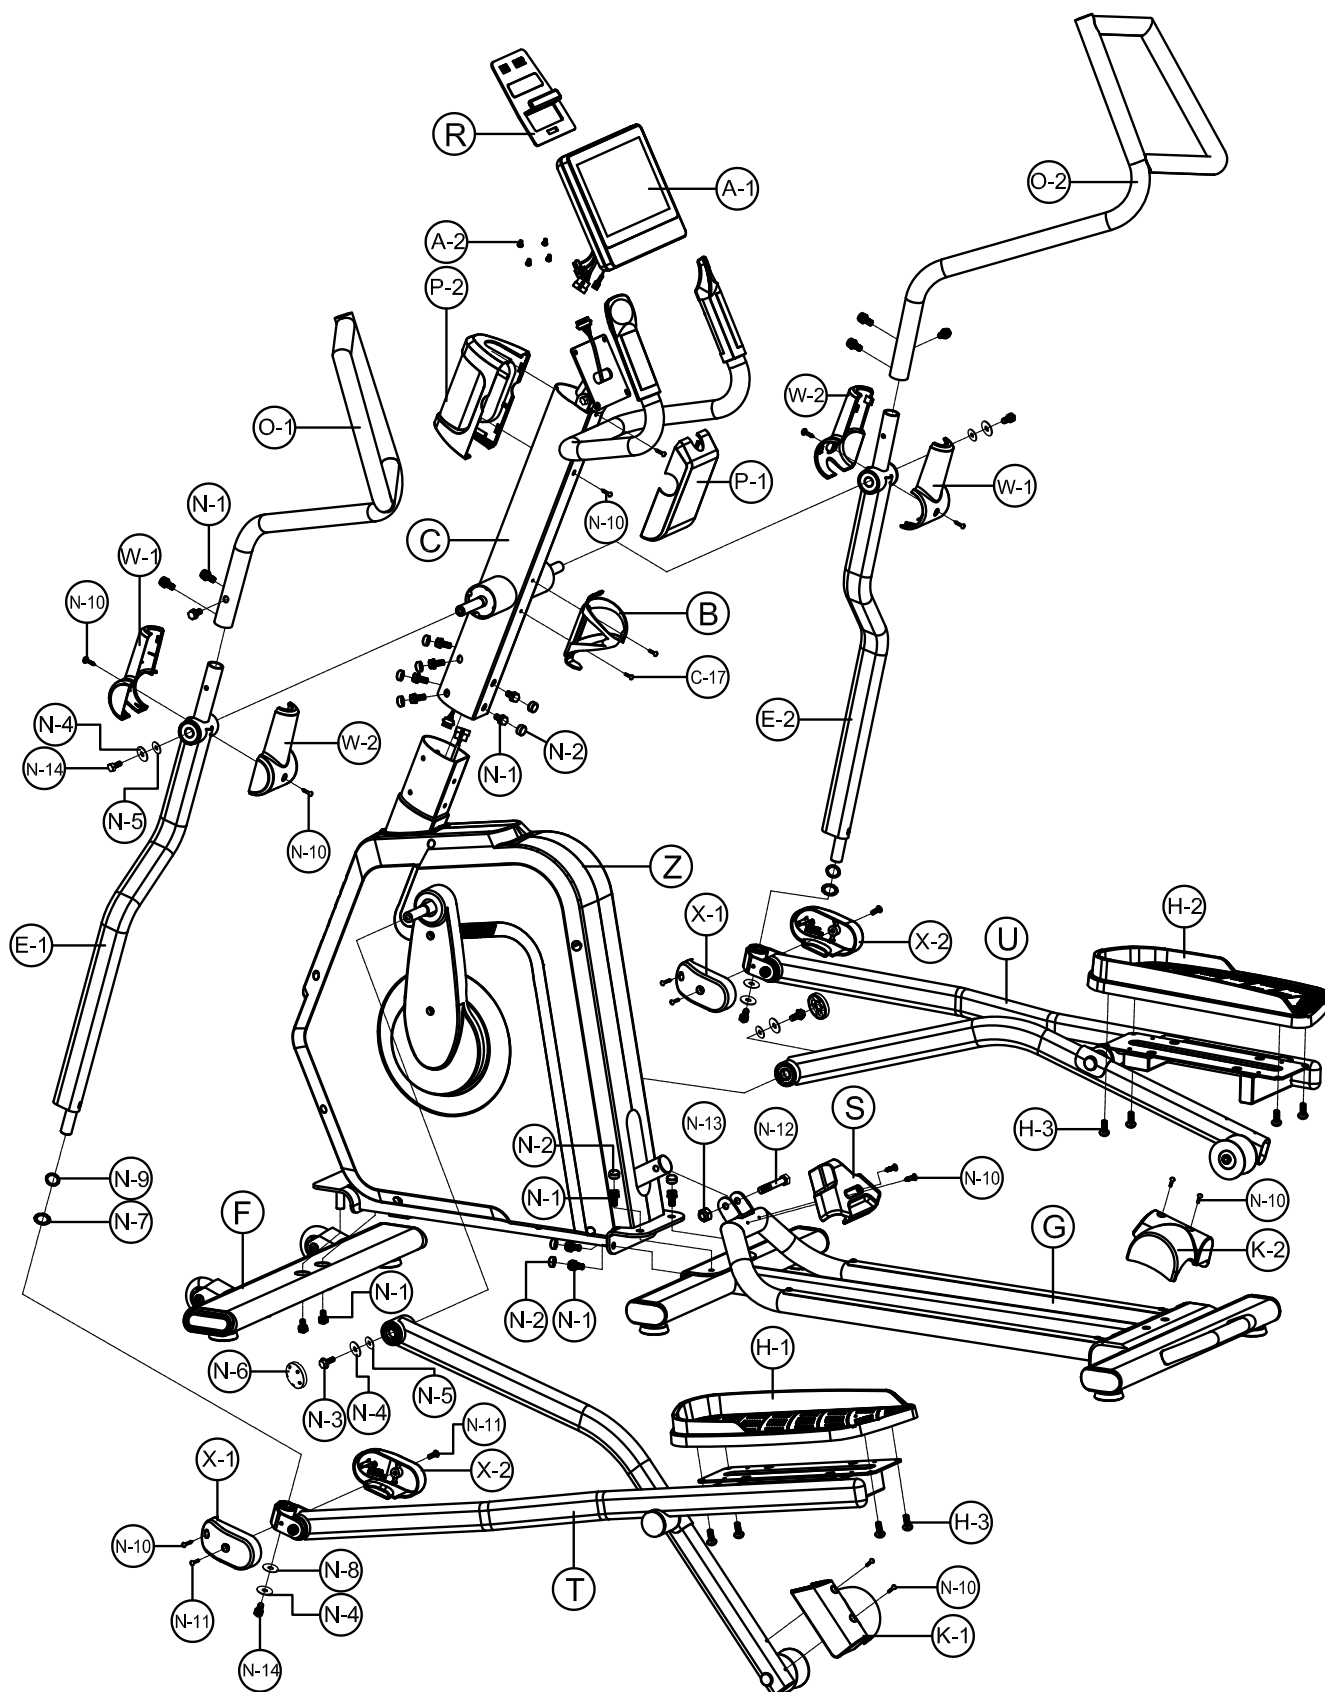

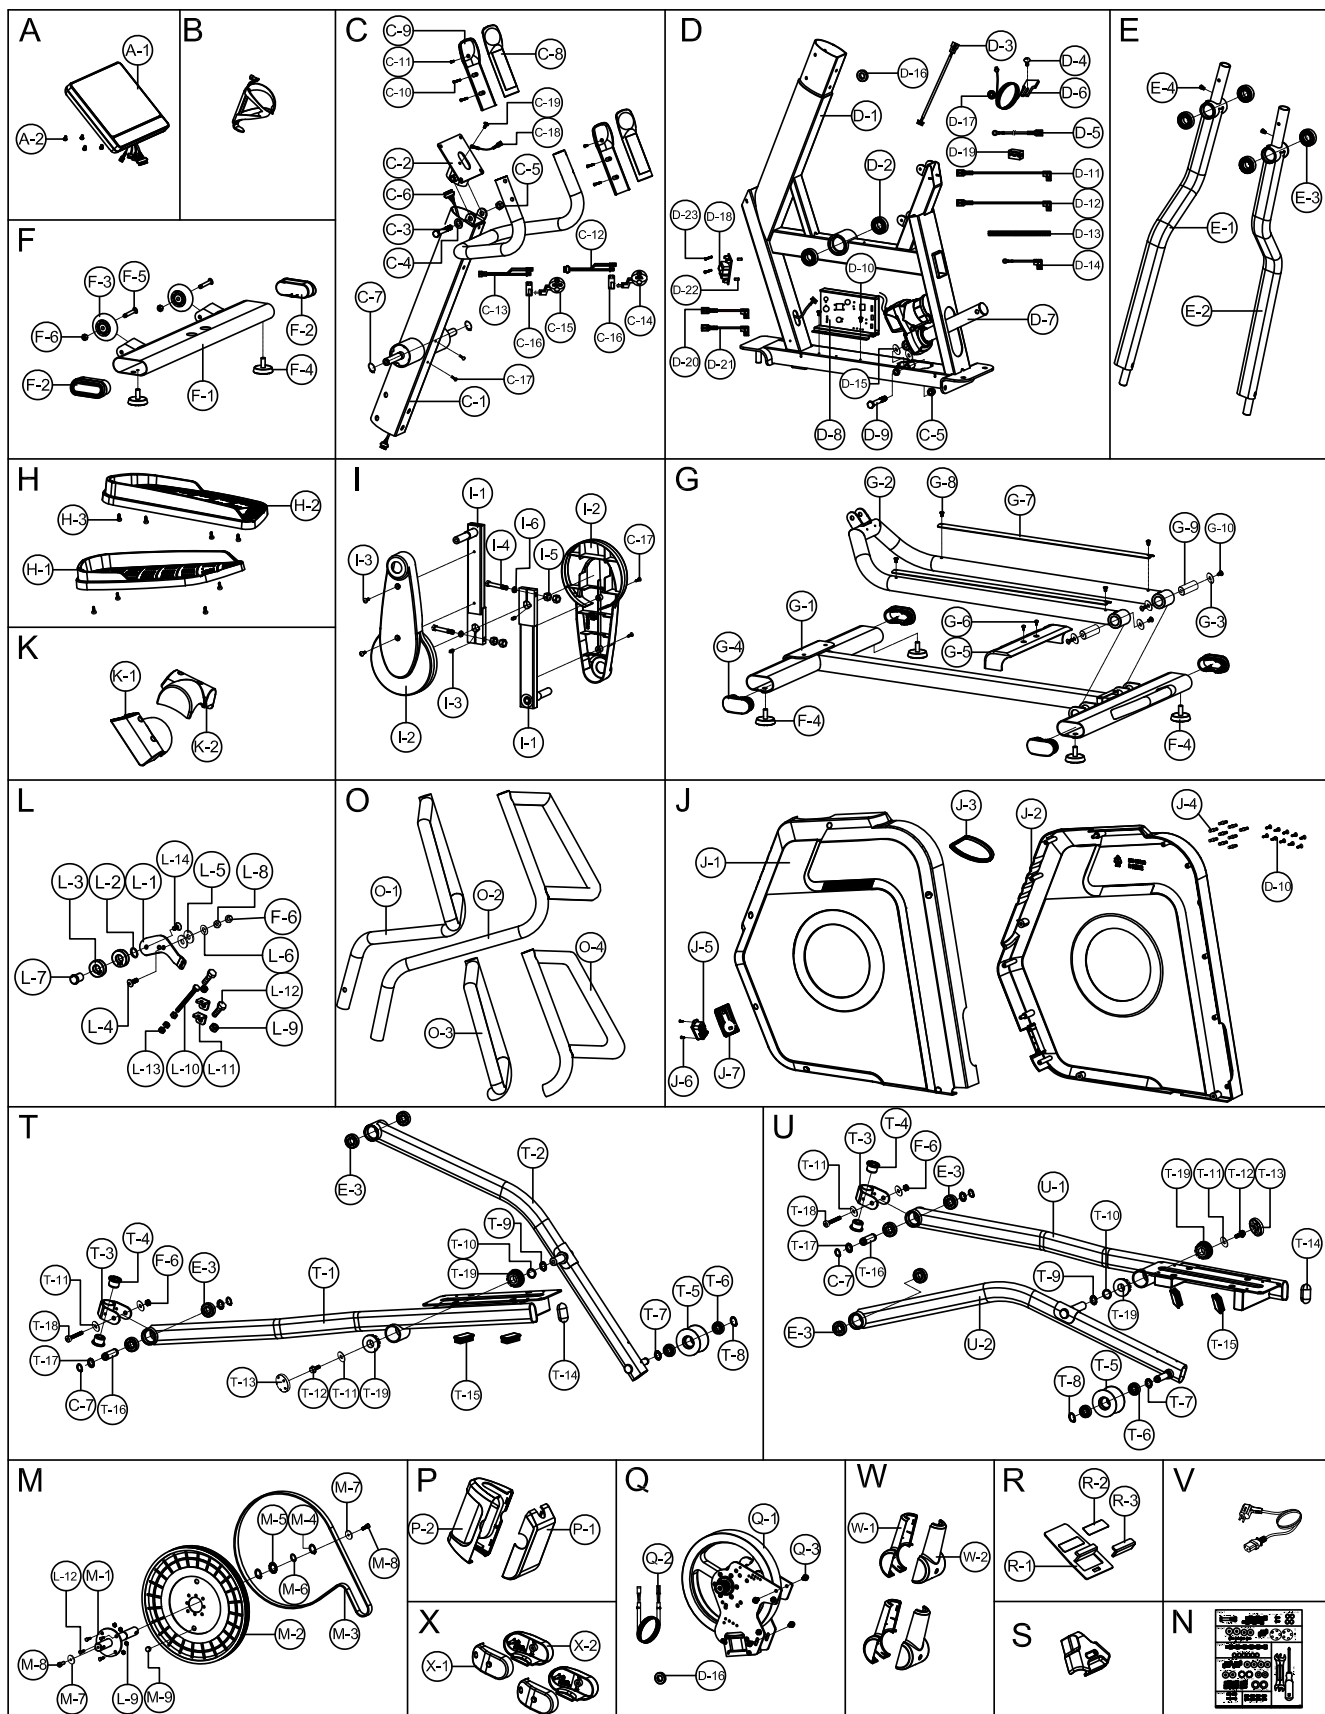

Products from Kettler® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warranty

The warranty is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warranty holder personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	EN
TECHNIK  +49 4621 4210-900  +49 4621 4210-698  technik@fitshop.de  Öffnungszeiten entnehmen Sie unserer Homepage.	TEKNIK OG SERVICE  80 90 16 50 +49 4621 4210-945  info@fitshop.dk  Åbningstider kan findes på hjemmesiden: https://stg.fit/statit7	CUSTOMER SUPPORT  00800 2020 2772 +494621 4210 944  service@fitshop.com  You can find the opening hours on our homepage: https://fsg.fit/en
SERVICE	FR	BE
	TECHNIQUE & SERVICE  +33 (0) 189 530984 +49 4621 42 10 933  info@fitshop.fr  Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit4	TECHNIQUE & SERVICE  02 732 46 77 +49 4621 4210 933  info@fitshop.be  Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit8
ES	NL	INT
TECNOLOGÍA Y SERVICIOS  911 238 029  info@fitshop.es  Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5	TECHNISCHE DIENST & SERVICE  +31 172 619961  service@fitshop.nl  De openingstijden vindt u op onze homepage: https://stg.fit/statit3	TECHNICAL SUPPORT & SERVICE  +49 4621 4210-944  service-int@fitshop.de  You can find the opening hours on our homepage: https://stg.fit/statita
PL	AT	CH
DZIAŁ TECHNICZNY I SERWIS  22 307 43 21 +49 4621 42 10-948  info@fitshop.pl  Godziny otwarcia można znaleźć na stronie głównej: https://stg.fit/statit6	TECHNIK & SERVICE  0800 20 20277 (Freecall) +49 4621 42 10-0  info@fitshop.at  Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statitb	TECHNIK & SERVICE  0800 202 027 +49 4621 42 10-0  info@fitshop.ch  Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statit9

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores

KETTLER

WEBSHOP AND SOCIAL MEDIA

Since 2024 Kettler sports equipment is part of the Fitshop brand family, Europe's largest specialist retailer for home fitness equipment. Kettler equipment such as treadmills, cross trainers, and rowing machines have always played an important role in Fitshop's more than 40-year history. Kettler stands for the highest product quality, reliability, and tradition. Kettler sports equipment helps you lead an active and healthy life. They make exercise fun for young and old. As part of the Fitshop Group, Kettler Sport remains true to these values.

Visit us also on our social media platforms or our online shop!

	www.fitshop.com/kettler www.kettlersport.com
	www.facebook.com/fitshopgroup/
	www.instagram.com/fitshopgroup/
	www.linkedin.com/company/fitshop-gmbh
	www.stg.fit/YouTube_DE

Kettler is part of the Fitshop Group.

KETTLER

SKYLON 600